

CRUX-0013


VW CRAFTER '06-'17 & MERCEDES SPRINTER '06-

No.	Part No.	Description	Full Kit	Box Only
1	SMW-0106 (LH or RH)	VW Crafter '06-'17 & Mercedes Sprinter '06- Sliding Door Extension	1	1
2	-	Fluted Aluminium Edge (x3 pieces)	1	-
3	Pan Head Screw	No.8 x 1/2"	4	4
4	CSK Machine Screw	M5 x 25mm	4	4
5	M5 Chimney Nut	4 x 8mm	4	4
6	CSK Screw	No.8 x 1/2"	4	-


What's in the box?

The various kit options and their parts are noted in the table with a diagram on the following page.

Items/fasteners in blue are pre-fitted on these kits.

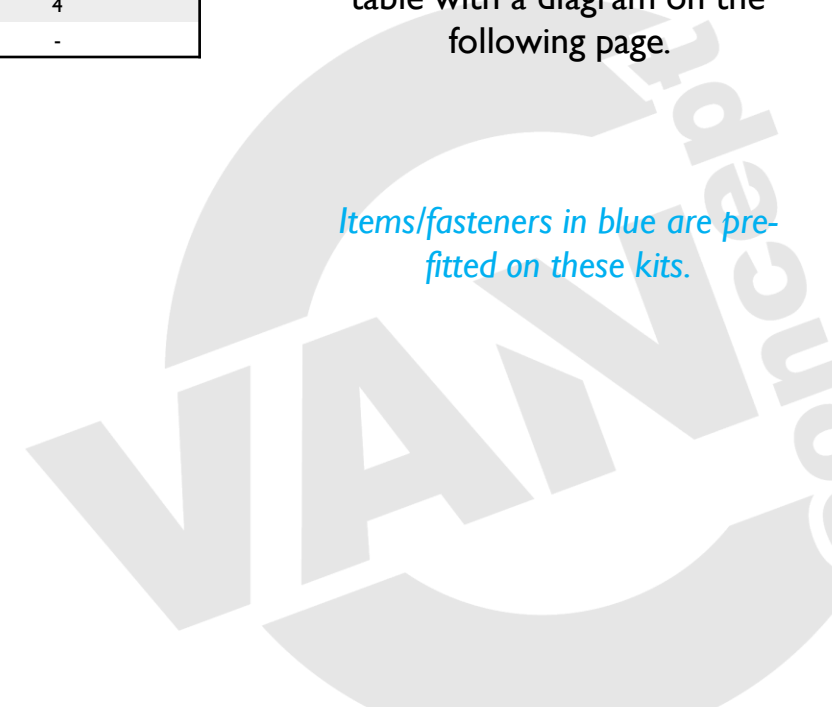

INSTRUCTIONS STEP EXTENSION STORAGE BOX

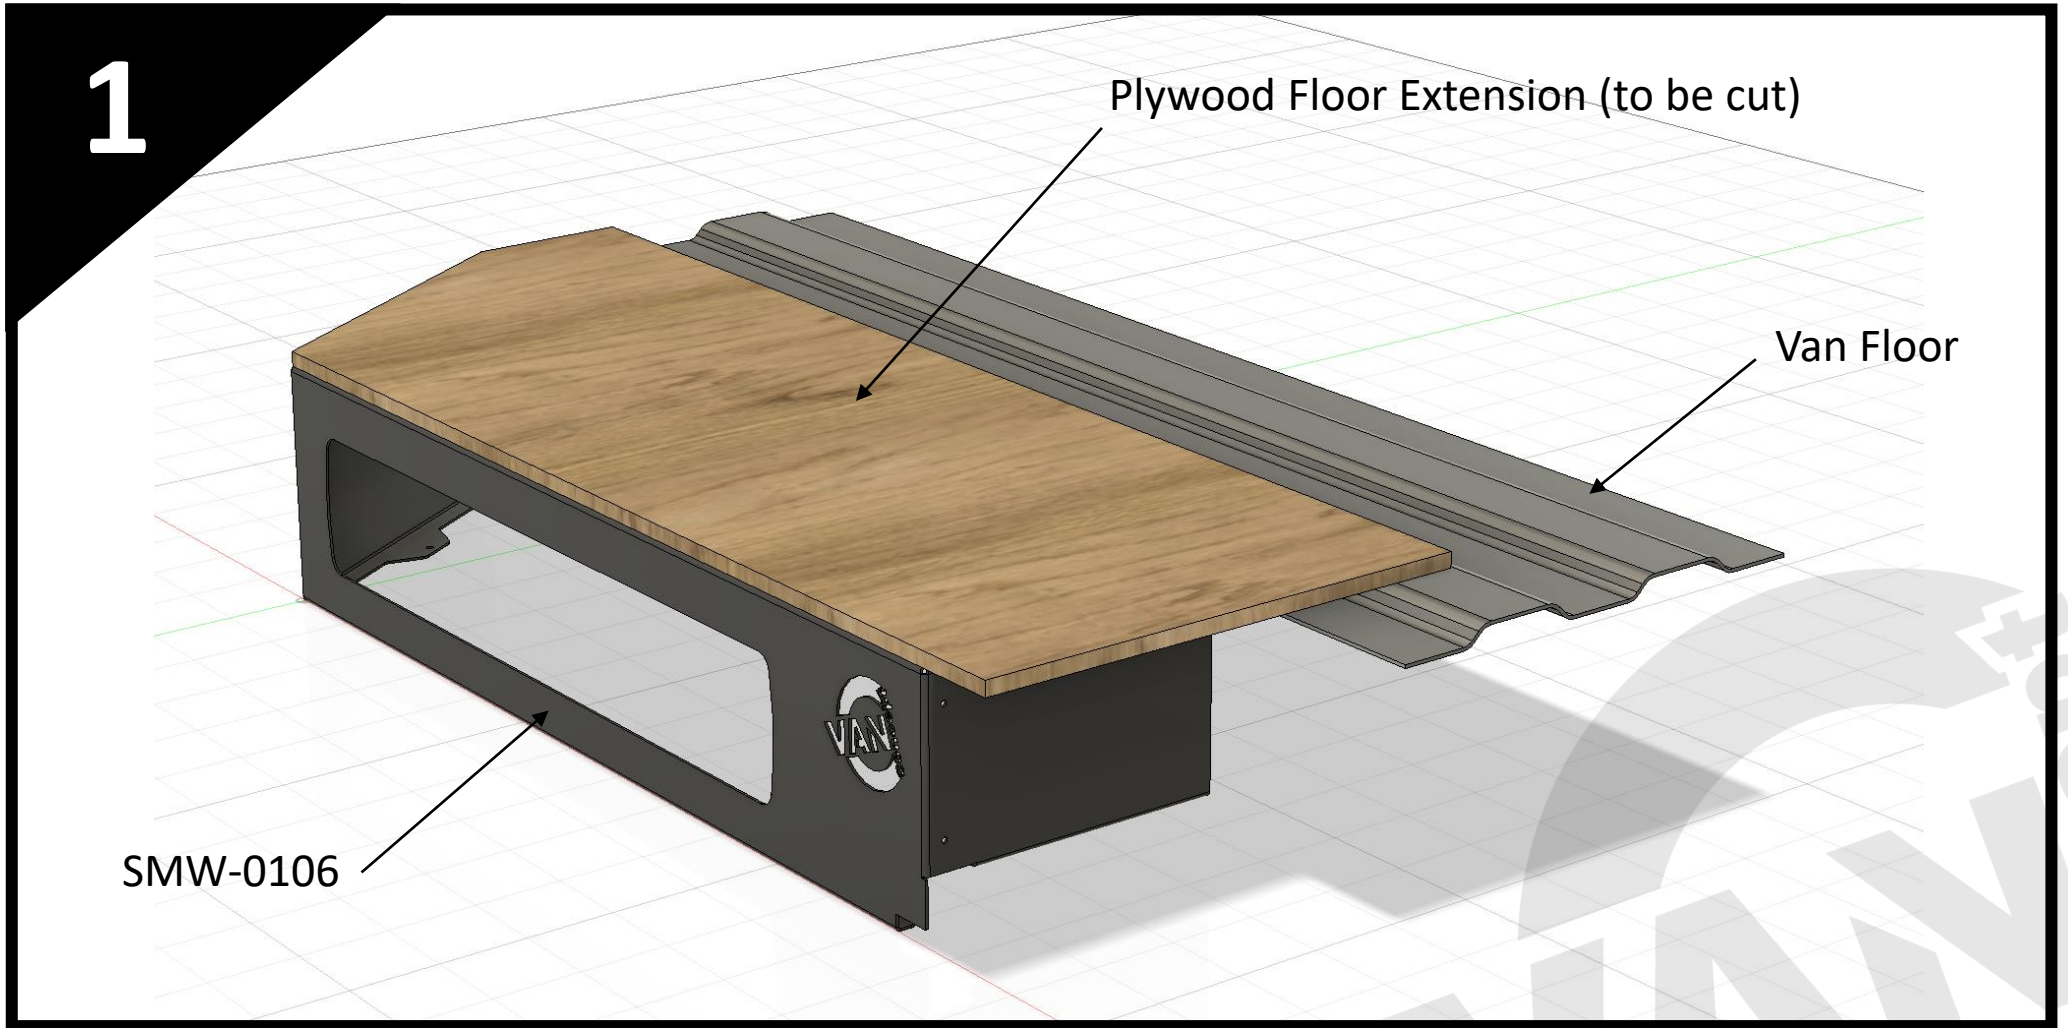


- The top of the Step Extension Storage Box is designed to be the same height as the top of the ribs in the van floor.
- If you are fitting battens/insulation, then plywood packers will need to be added on top of the box to create a level floor.

INSTRUCTIONS STEP EXTENSION STORAGE BOX




- Position the box on the step and mark/pre-drill $\varnothing 3\text{mm}$ holes in the side-step.

INSTRUCTIONS STEP EXTENSION STORAGE BOX

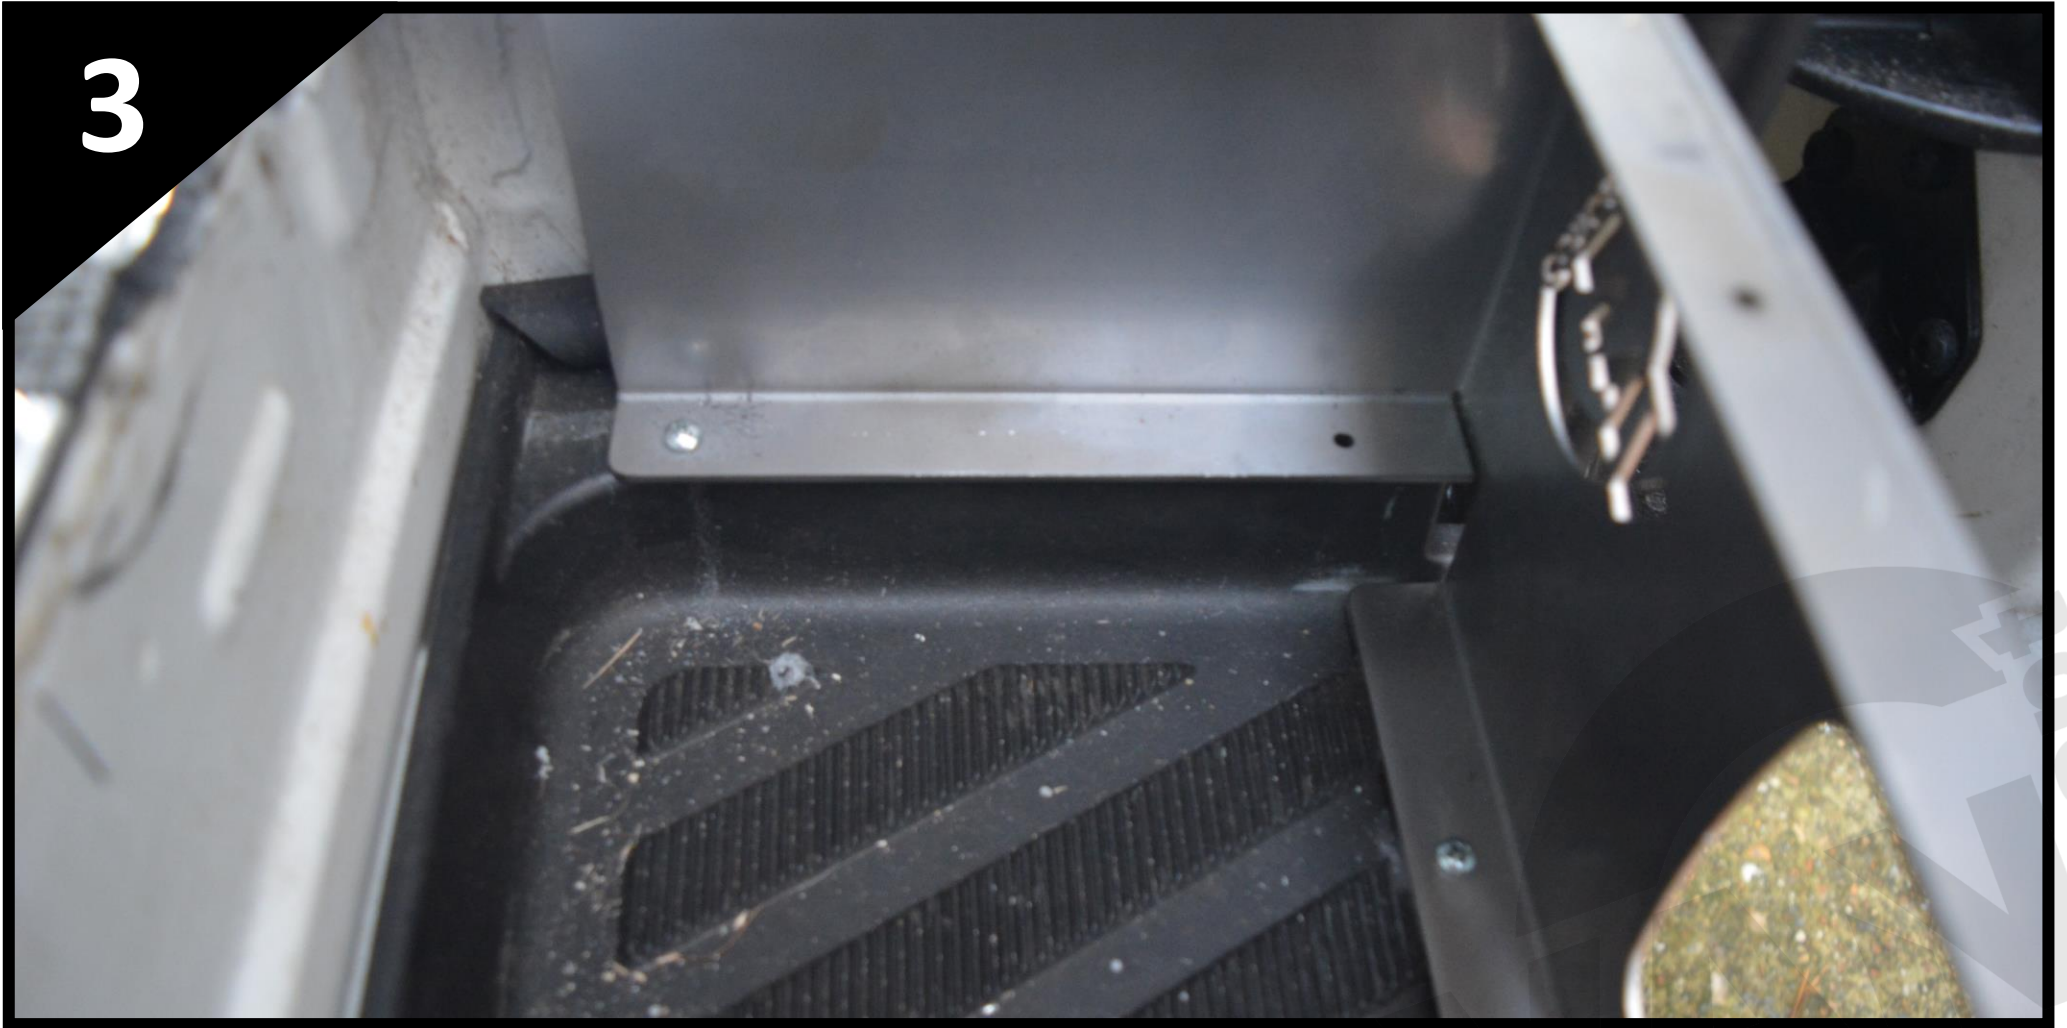

- Screw four pan head screws in the bottom to secure the box in place (two at the rear and two at the front).


INSTRUCTIONS STEP EXTENSION STORAGE BOX

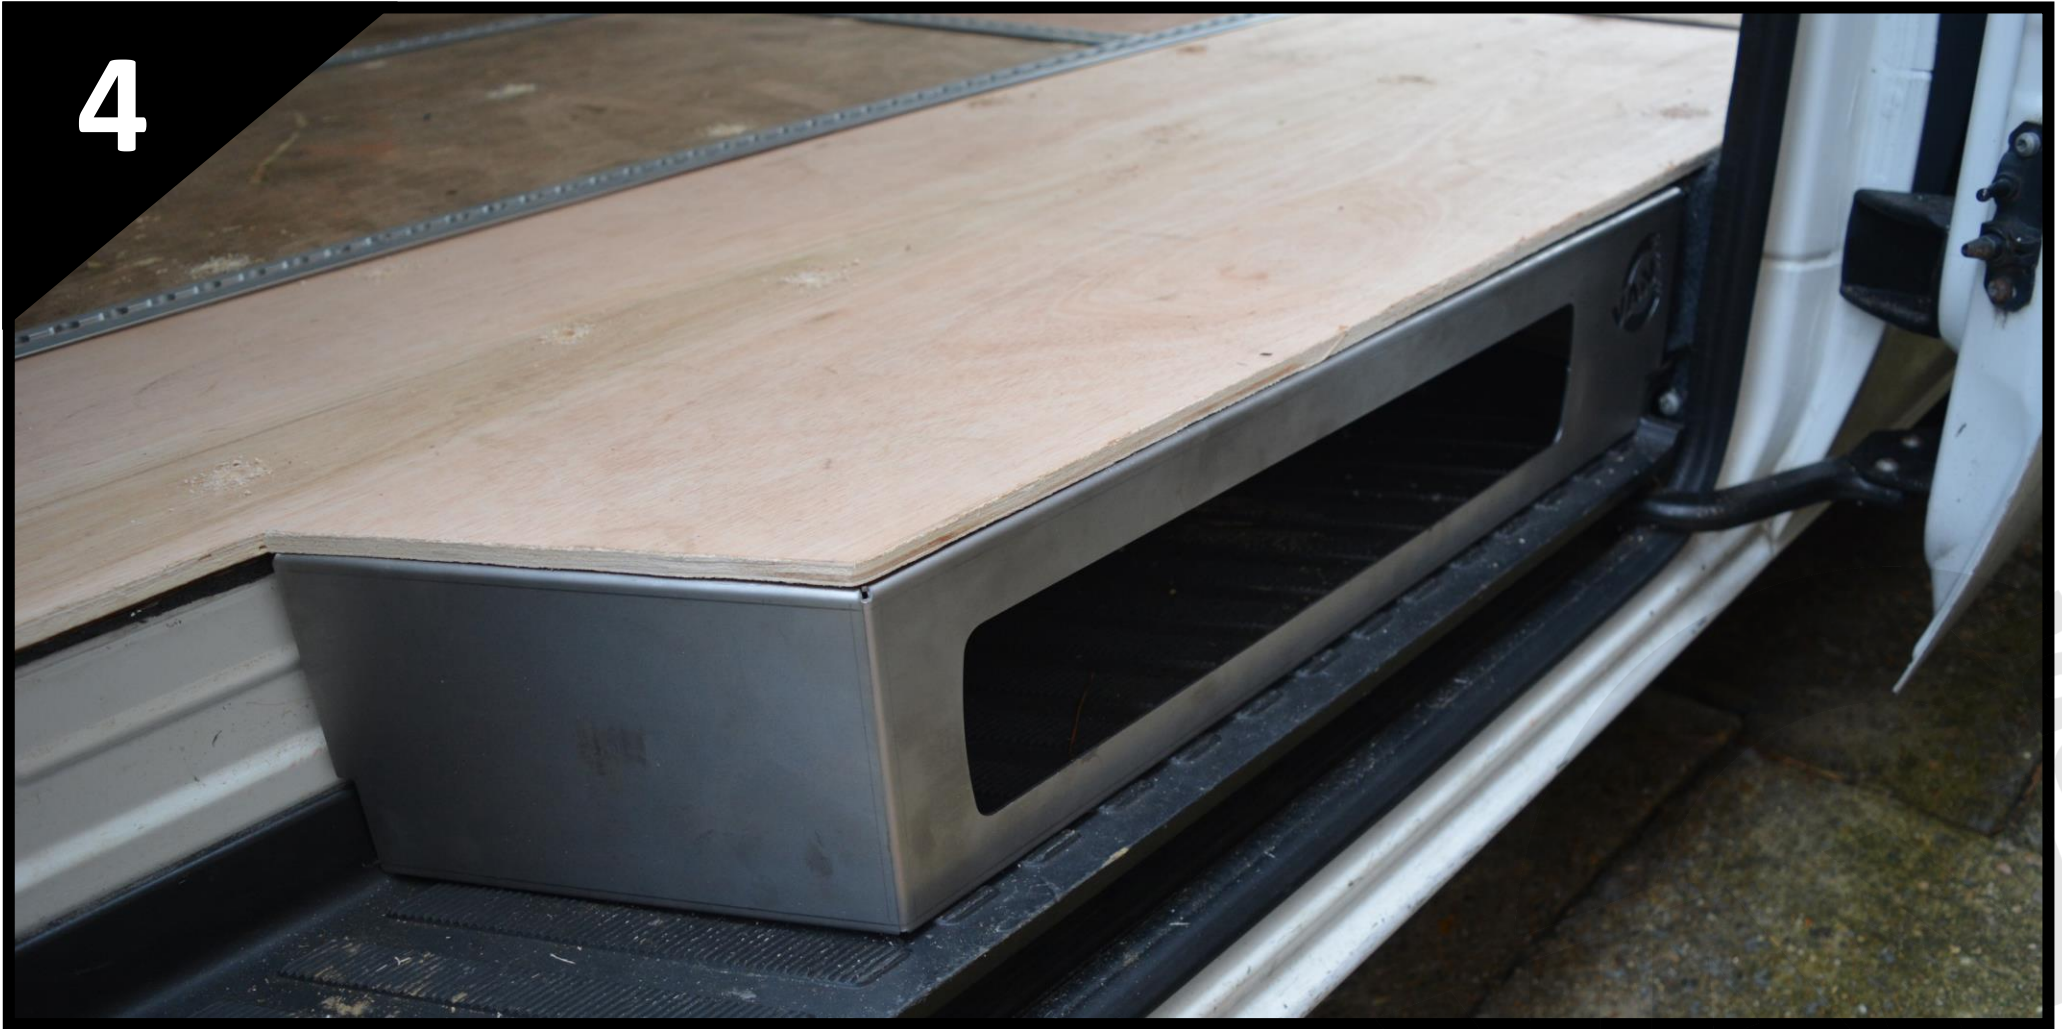

- If fitting a new floor, position your floor in the van and scribe around the box before cutting to the correct profile.


INSTRUCTIONS STEP EXTENSION STORAGE BOX

5

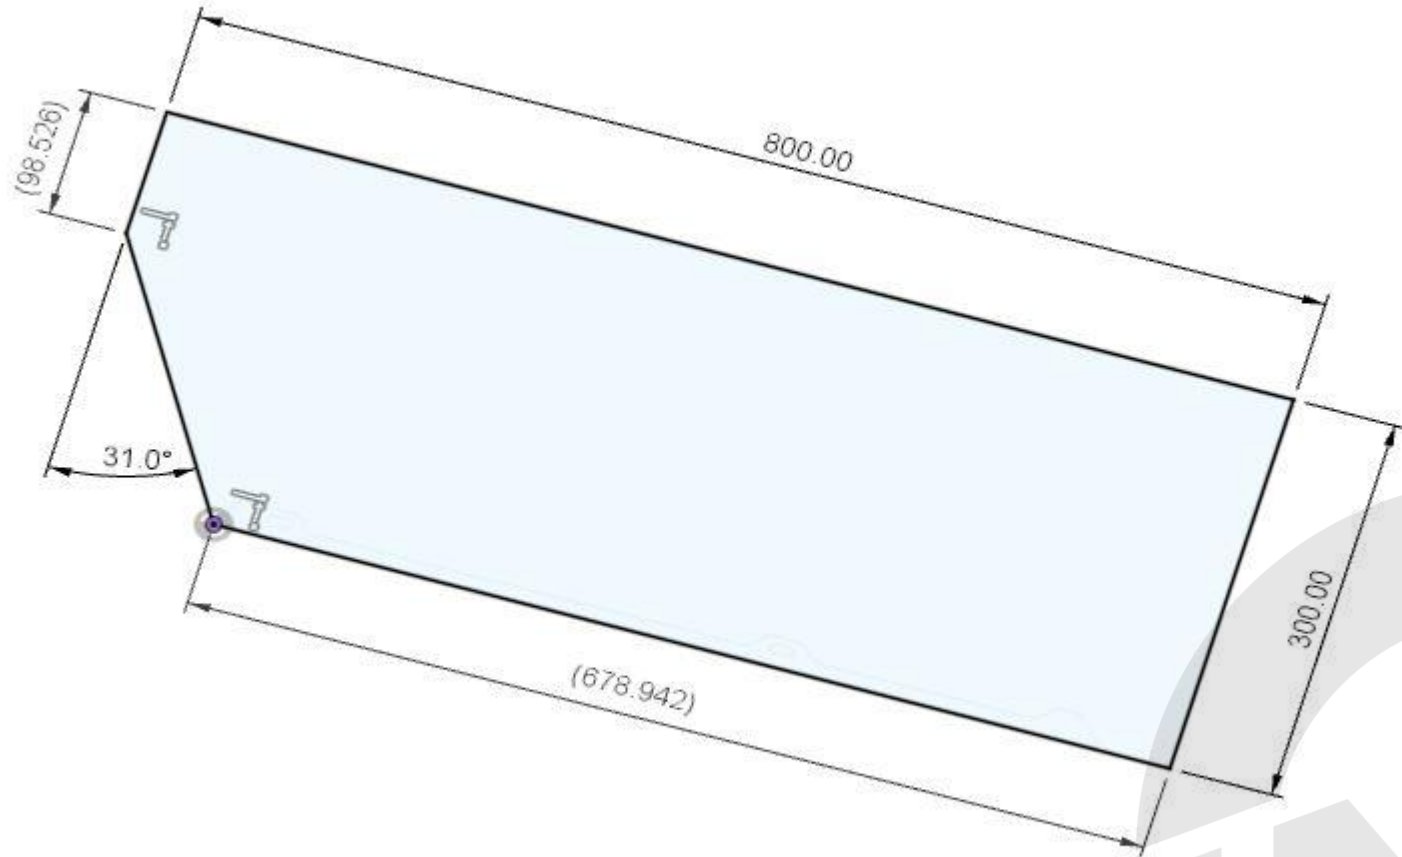

- If using the existing floor, cut out a piece of ply to the same thickness of your existing floor to the approximate dimensions above.
 - This is designed to overlap the current floor for strength.

INSTRUCTIONS STEP EXTENSION STORAGE BOX

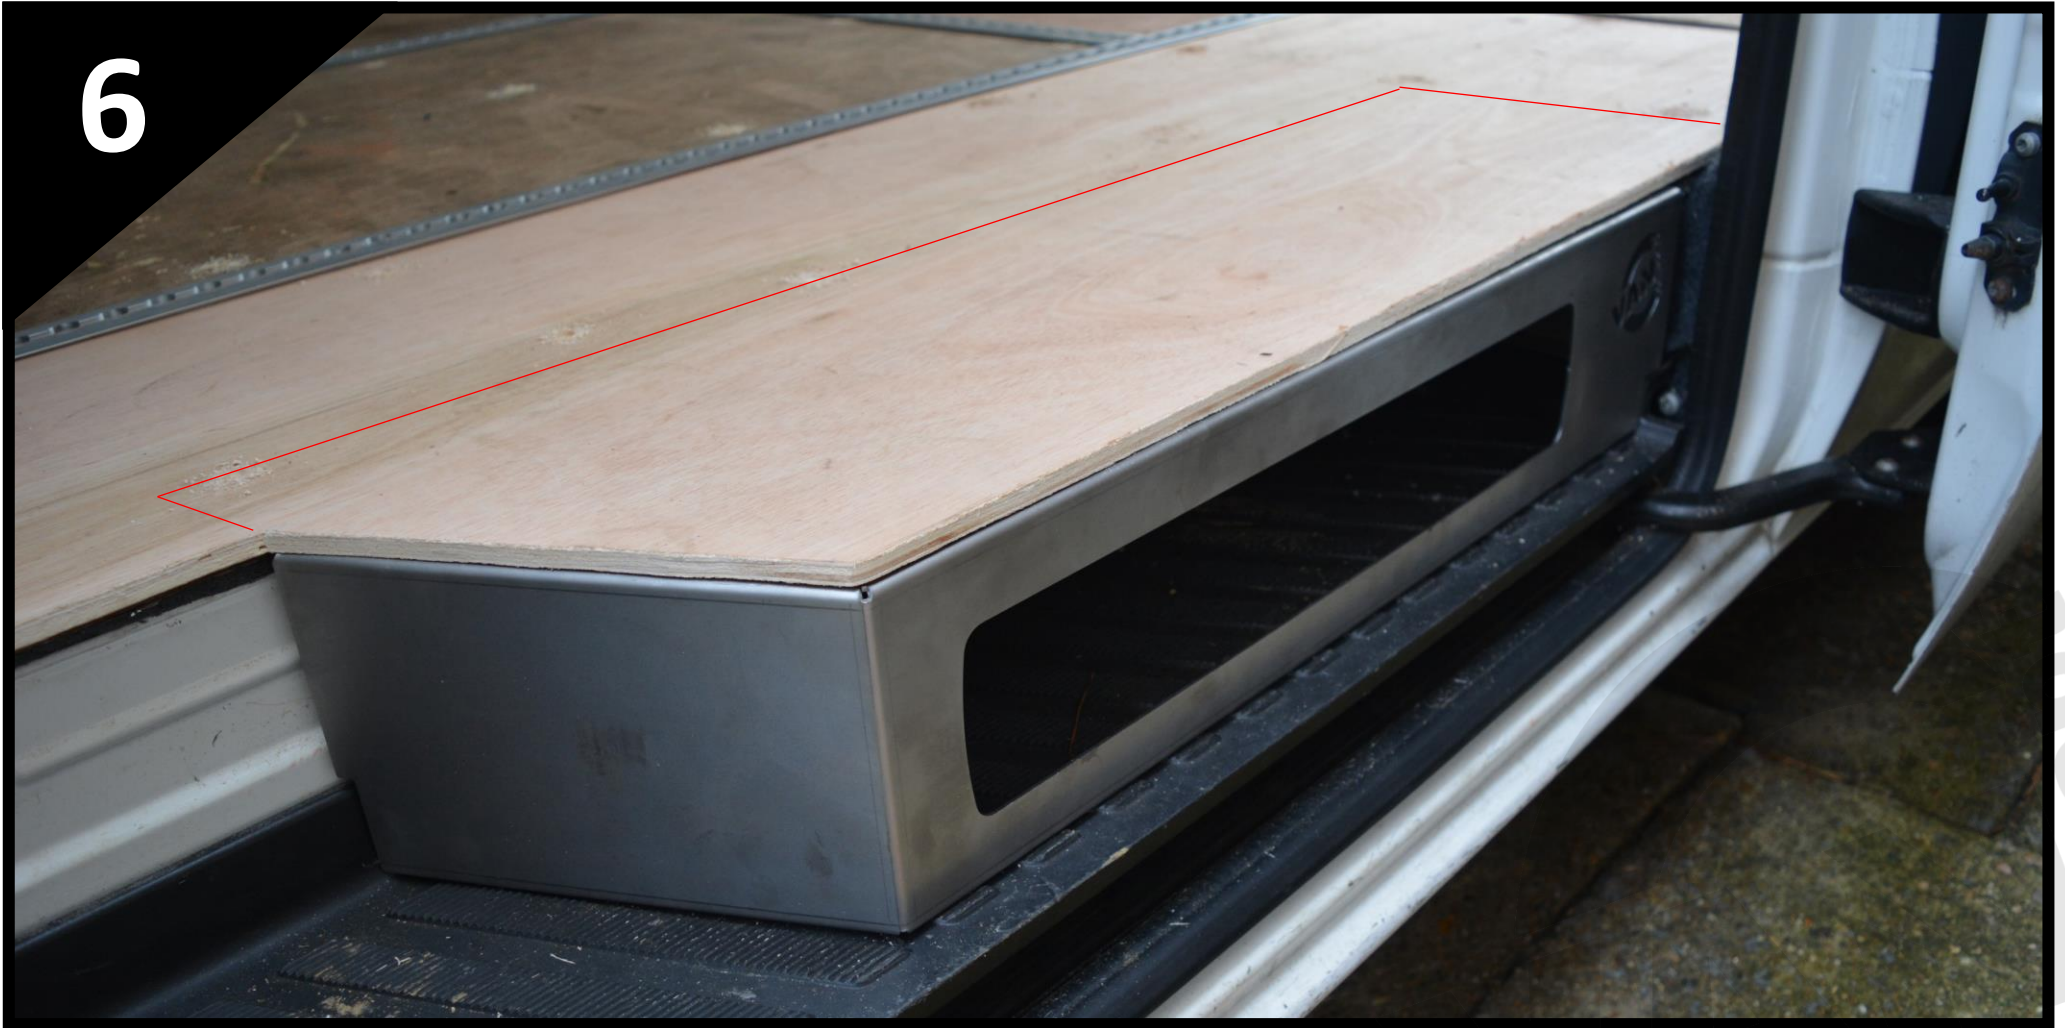

- As the extension overlaps, a section of the current floors needs to be cut away as shown. Use the newly cut extension piece as a template to match it up.
- With the cut-out made, re-fit the floor and extension, ensuring at least three screws (*not provided*) secure the new extension into the original floor area.

INSTRUCTIONS STEP EXTENSION STORAGE BOX



- With the flooring (and floor vinyl) fitted, secure the box to the floor with the remaining three pan head screws by accessing these through the opening. (There are multiple holes, but only three screws are required).
 - Fit the fluted aluminium edges and use the 8x countersunk screws to secure in place.
 - *If the side-step needs to be removed for maintenance, remove the bolts and slide the box out for access.*