


# INSTRUCTIONS CAB HEADLINER SHELF


No.	Part No.	Description	Full Kit	Semi-DIY Install Kit	DIY Install Kit
1	P-0008	VW Crafter '06-'17 & Mercedes Sprinter '06-'18 Cab Headliner Shelf	1	1	-
2	W-0003	Cab Shelf Strengthening Rib	2	2	-
3	SMW-0055 LH	Cab Shelf Bracket Rear LH	1	1	1
4	SMW-0054	Cab Shelf Bracket Side LH	1	1	1
5	SMW-0053	Cab Shelf Bracket Side RH	1	1	1
6	SMW-0055 RH	Cab Shelf Bracket Rear RH	1	1	1
7	CSK Screw	4 x 25mm	5	5	15
8	Flanged Button Head Screw	No.6 x 1/2"	8	8	8
9	Flanged Button Head Bolt	M5 x 20mm	2	2	2
10	Rivet	4 x 8mm	4	4	4
11	CRUX-0011 Template	Paper Template	-	-	1

## What's in the box?

The various kit options and their parts are noted in the table with a diagram on the following page.

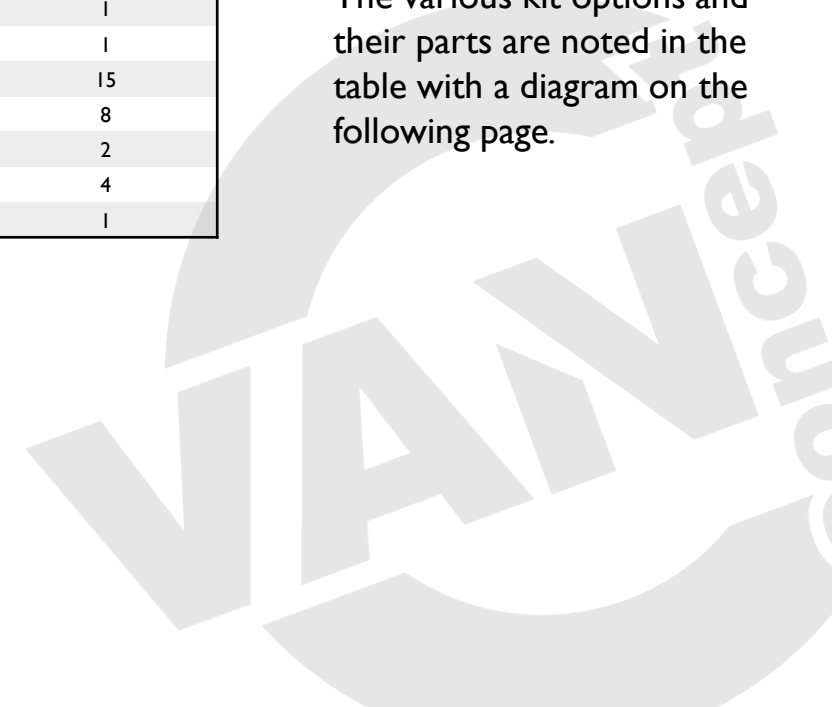

# INSTRUCTIONS CAB HEADLINER SHELF

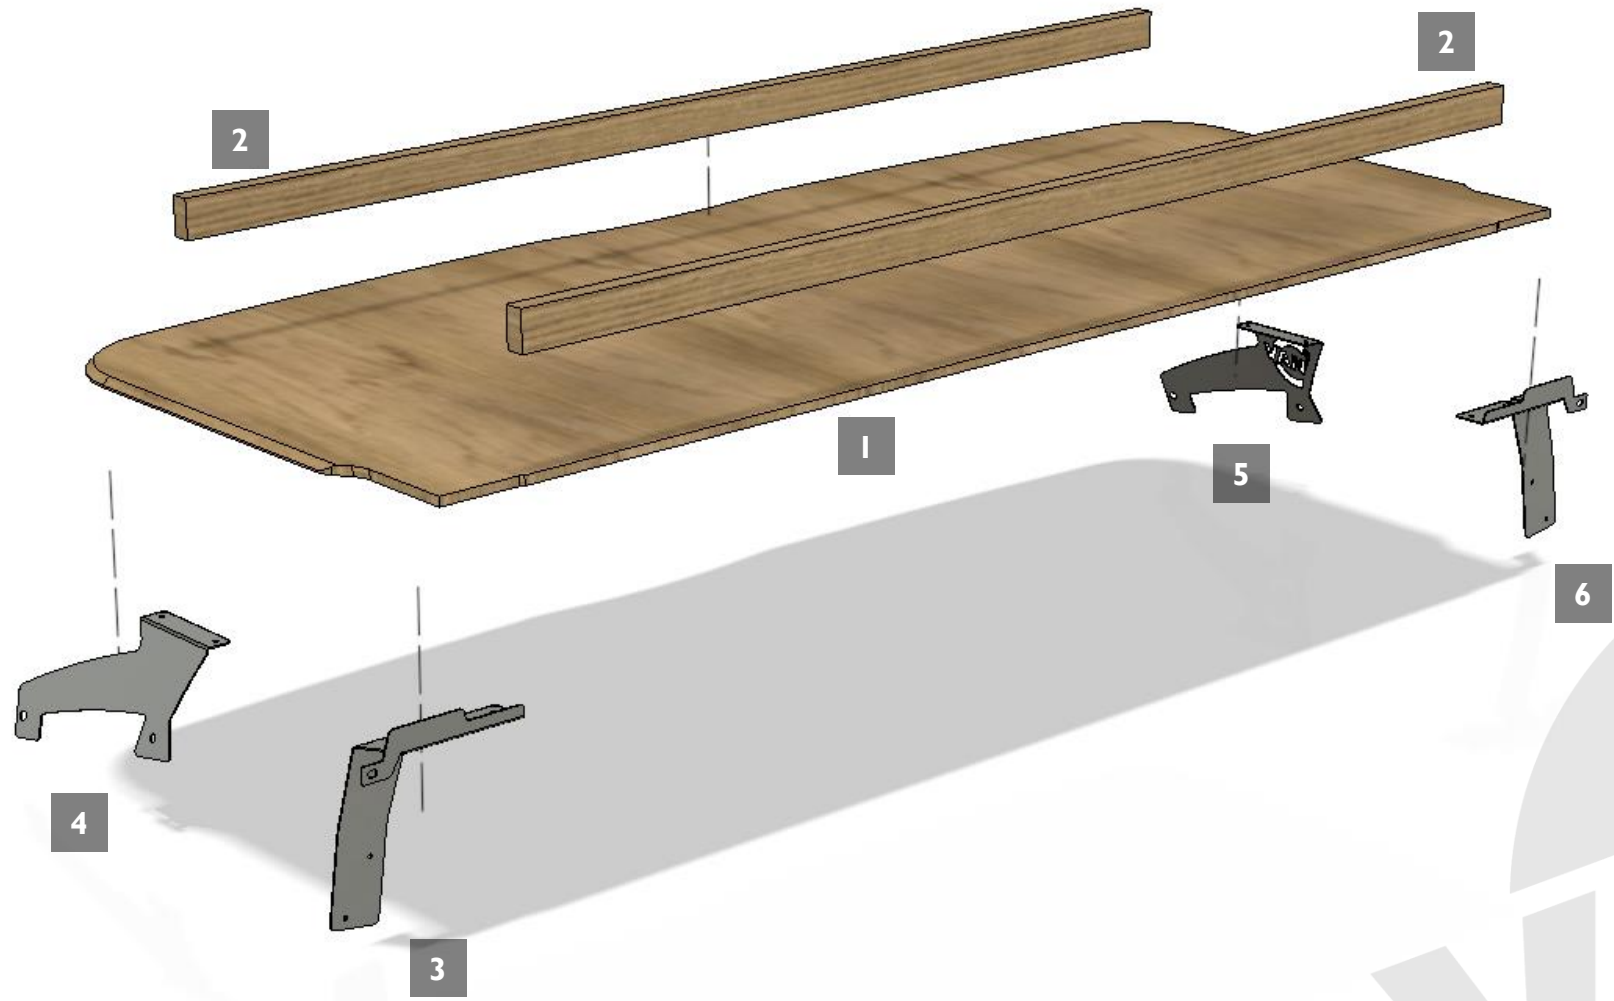

# INSTRUCTIONS CAB HEADLINER SHELF



- Use the template supplied to mark around and cut-out the shelf from 9mm plywood. (Note the areas that need a chamfer adding).
- Attach the two strengthening ribs in the positions shown on the template, using the screws supplied. (We advise using some PVA glue as well).

# INSTRUCTIONS CAB HEADLINER SHELF



- Line the plywood with your chosen finish.

# INSTRUCTIONS CAB HEADLINER SHELF



- Remove the two plastic caps covering the bolts.
- Remove the rear and loosen the front Torx bolt that secure the OEM grab handle in place.

# INSTRUCTIONS CAB HEADLINER SHELF



- Loosen the two remaining bolts that secure the sun visor and shelf.

# INSTRUCTIONS CAB HEADLINER SHELF



- Position the right sided front bracket (item 5) between the OEM grab handle and headliner, locate the holes and re-fit the two Torx bolts.
- Tighten all four bolts to secure the sun visor and shelf in place.

# INSTRUCTIONS CAB HEADLINER SHELF



- Repeat the previous two stages to fit the left sided bracket (item 4).



# INSTRUCTIONS CAB HEADLINER SHELF



- Position the right rear bracket in place between the headliner and bodywork rib and fit the flange head bolt into the OEM bulkhead mounting hole.
  - Mark the two rivet holes and drill two  $\text{Ø}4.1\text{mm}$  holes into the bracket.

# INSTRUCTIONS CAB HEADLINER SHELF



- Remove the bracket, de-burr the two holes and apply some anti-corrosion paint to the holes.
  - Repeat stage 7 & 8 to prepare the left side rear bracket.


# INSTRUCTIONS CAB HEADLINER SHELF



- Take the shelf and slide it into position from the rear, ensuring the front of the shelf sits on the top of the front two brackets.
  - With the shelf in position, re-fit the two rear brackets.

# INSTRUCTIONS CAB HEADLINER SHELF

10

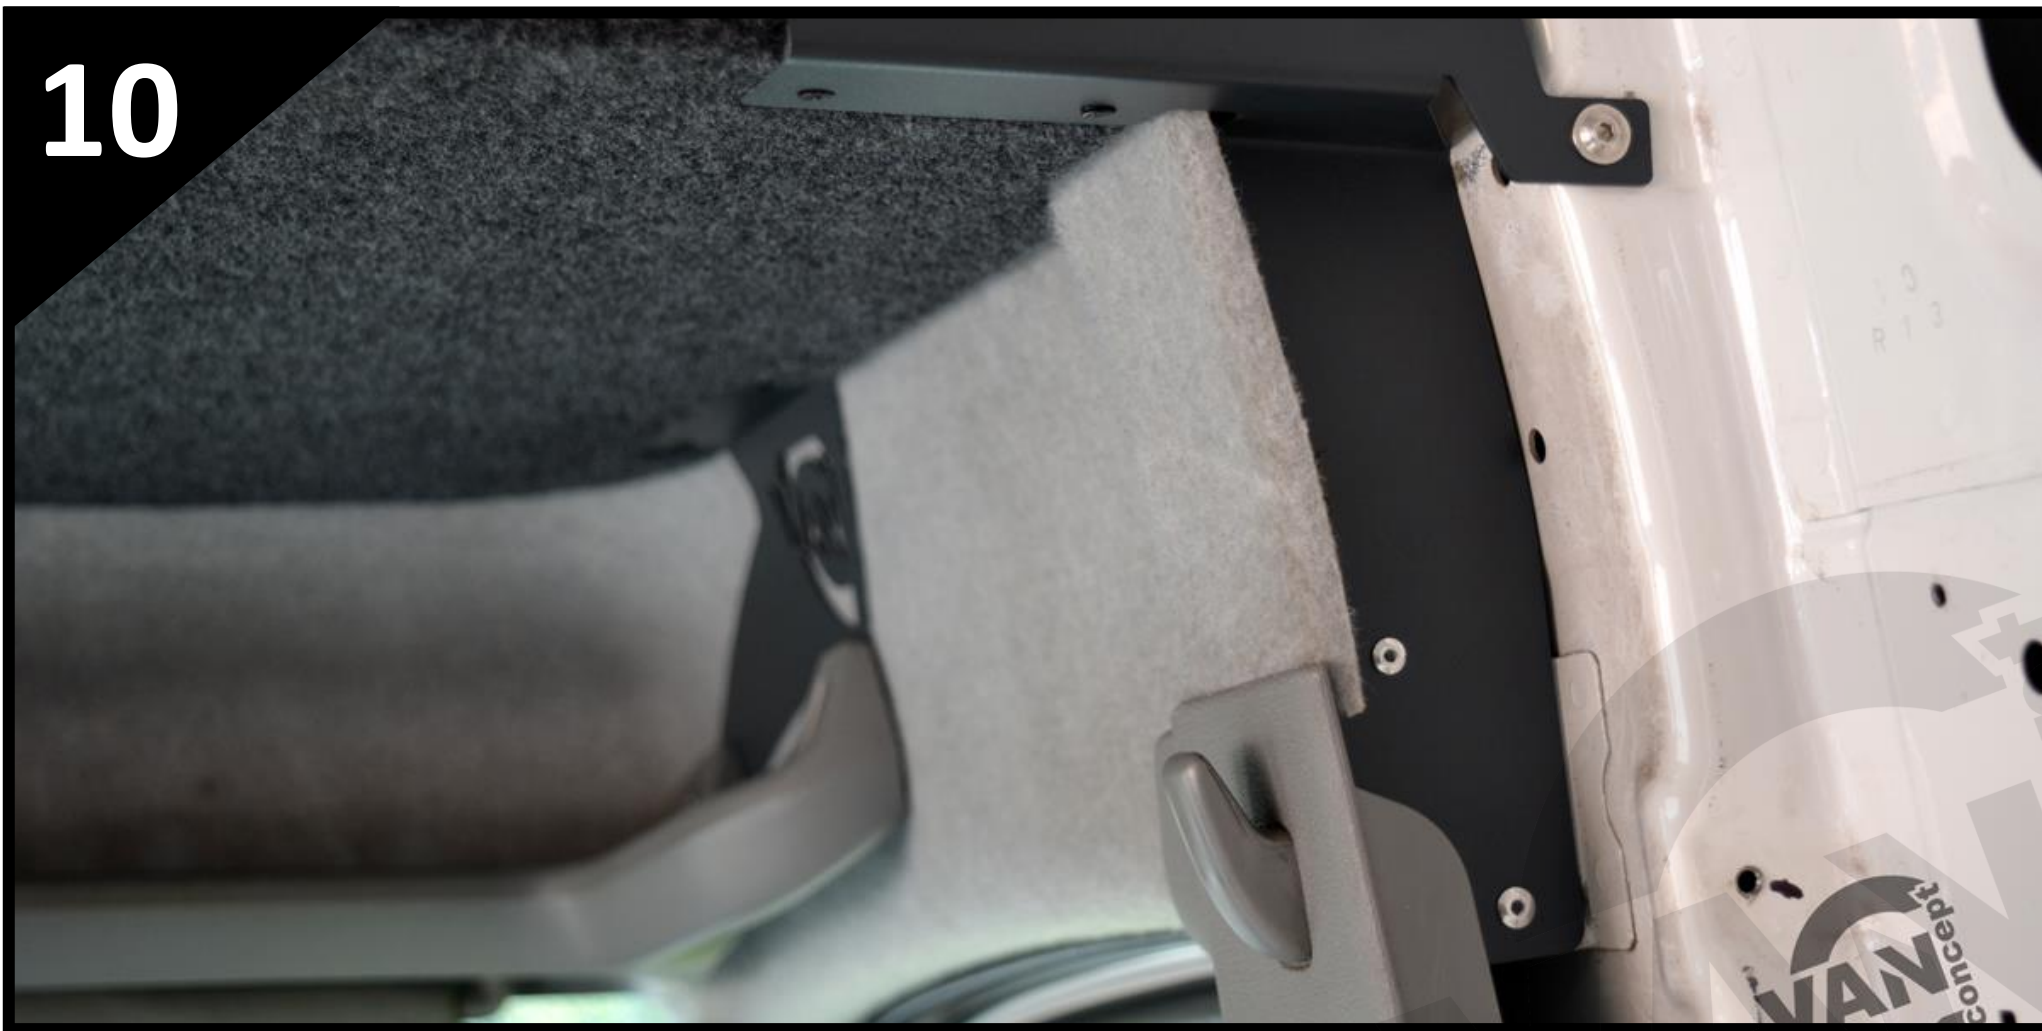

- Fit the four rivets and two bolts to secure the rear brackets in place.
- Ensure the shelf is sitting correctly and use the 8x small screws to secure the four brackets to the shelf.

# INSTRUCTIONS CAB HEADLINER SHELF

11



- The shelf is now installed. If fitting a trim around the bulkhead, the flange head bolts can be removed and bolted through the trim piece.
  - If fitting a surround to the rear of the shelf, use the remaining five screws to secure the strengthening rib to the surround.