

INSTRUCTIONS OEM EARTH COVER

What's in the box?

- 1x Cover
- 4x Rivets




INSTRUCTIONS OEM EARTH COVER




- Offer the cover in place around the OEM earth point, mark the position of the four holes and drill 4x Ø3.2mm holes into the bodywork.
- De-burr the four holes and apply some anti-corrosion paint to the holes.

INSTRUCTIONS OEM EARTH COVER

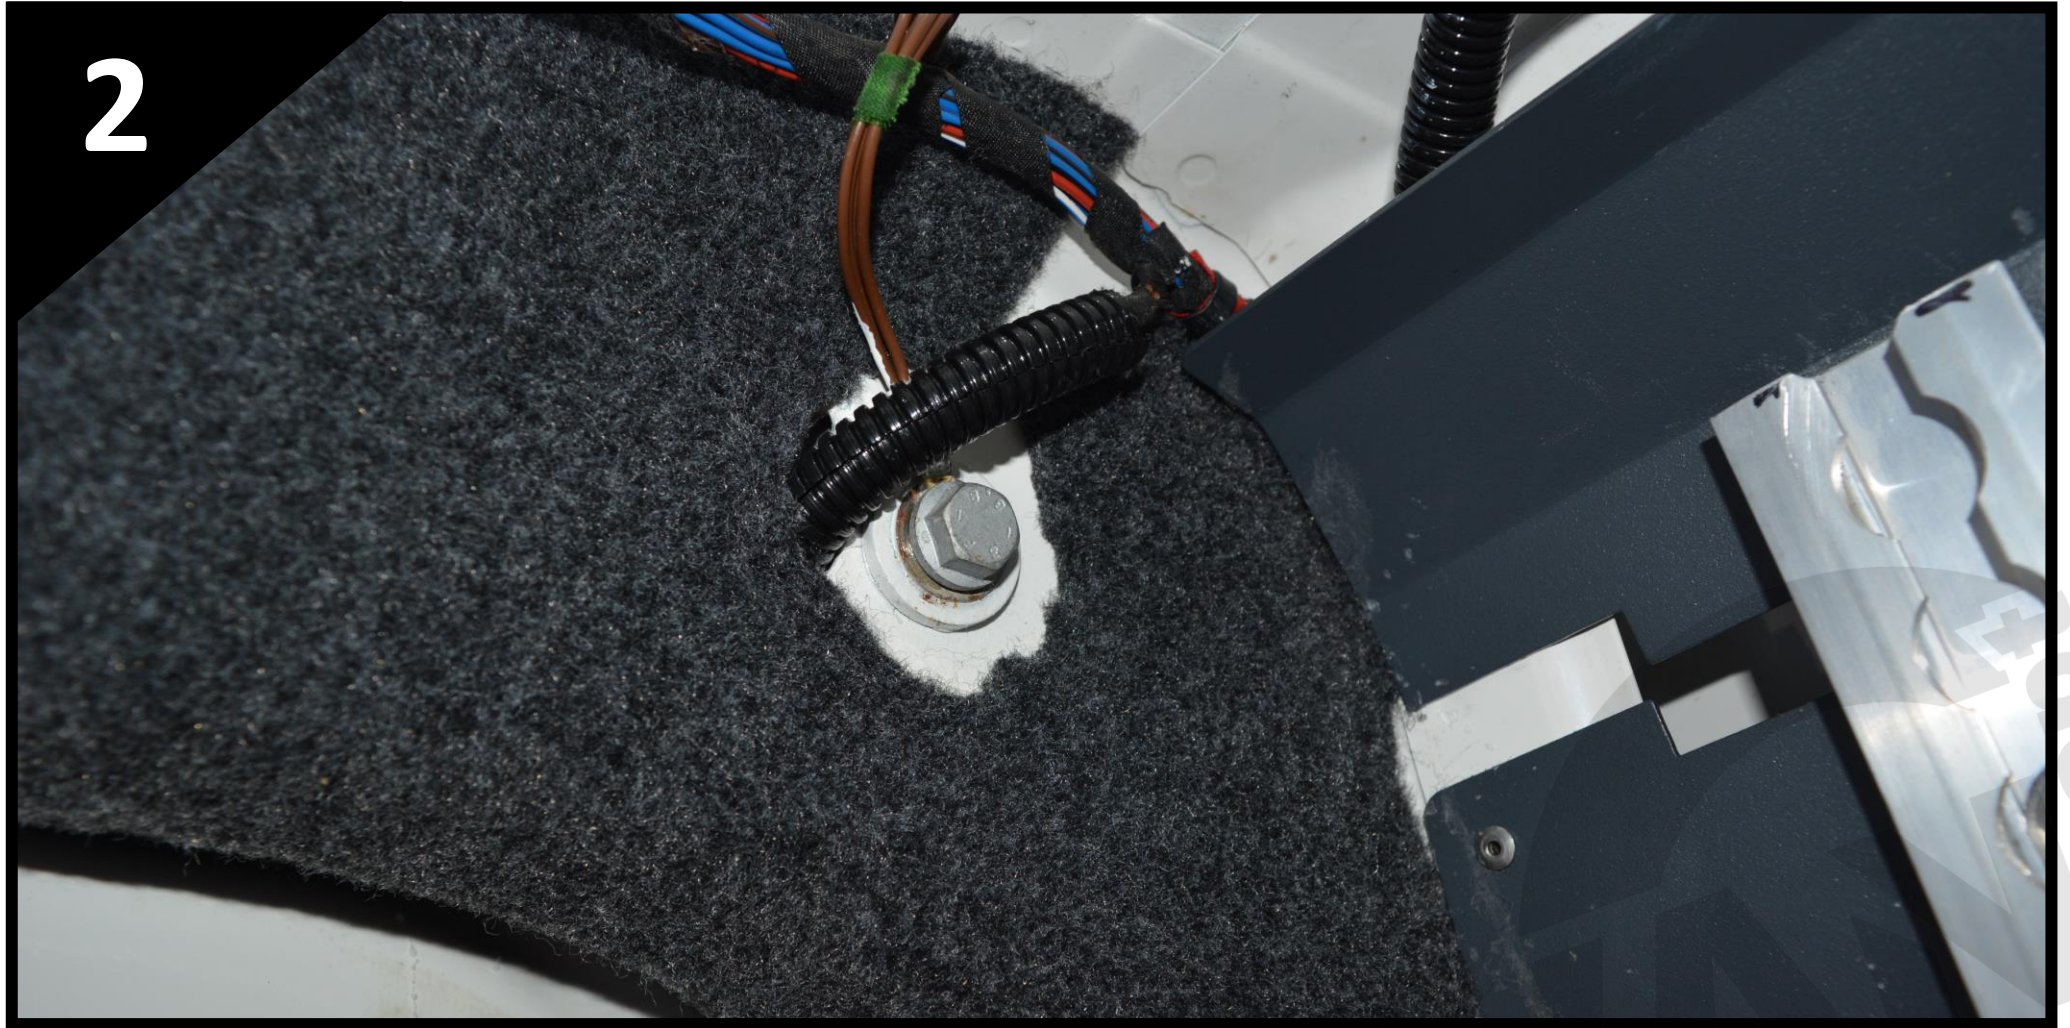

- Line the van interior with chosen lining material around the earth point and use a pointed object to locate the holes.

INSTRUCTIONS OEM EARTH COVER

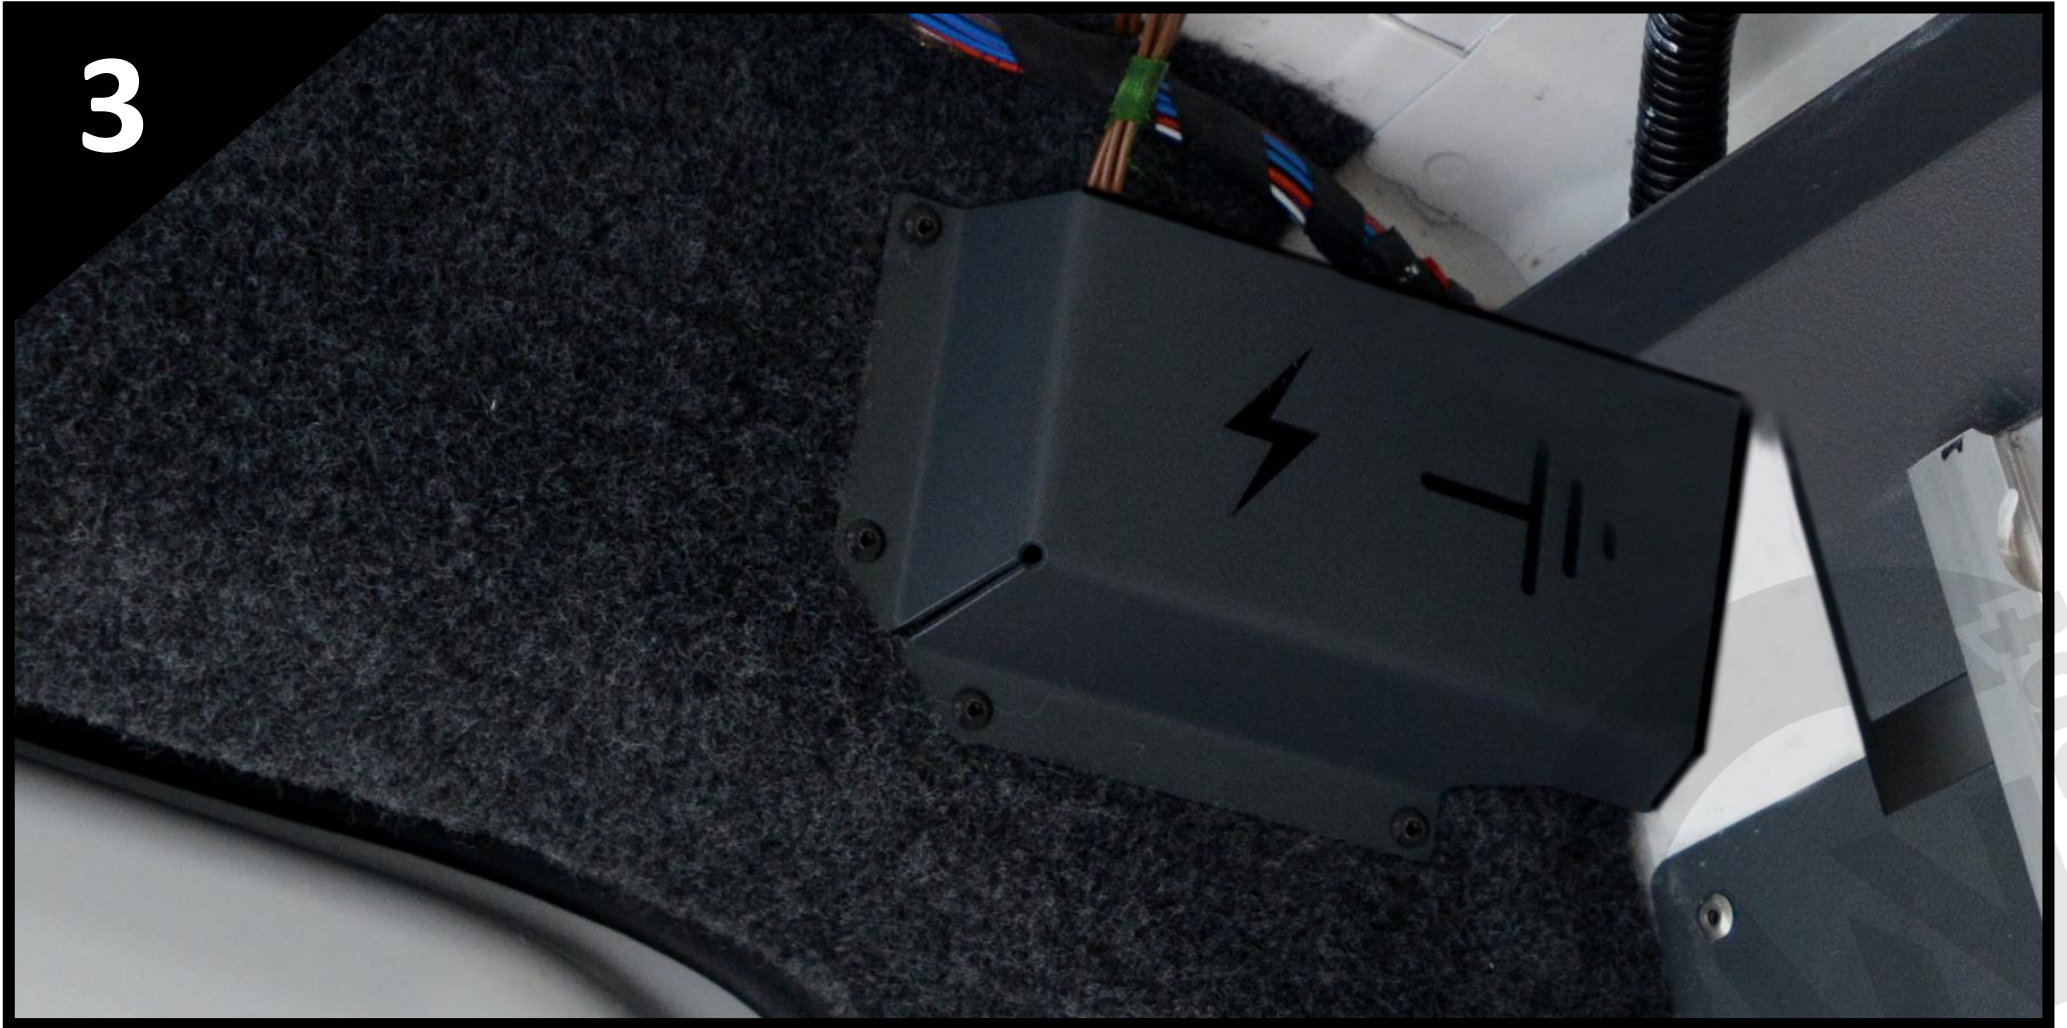

- Fit the four rivets supplied to secure the cover in place.