


INSTRUCTIONS CAB HEADLINER SHELF


No.	Part No.	Description	Full Kit	Semi-DIY Install Kit	DIY Install Kit
1	P-0048	Crafter/MAN TGE Cab Headliner Shelf	1	1	-
2	W-0003	Cab Shelf Strengthening Rib	2	2	-
3	SMW-0119	Crafter/MAN TGE Cab Shelf Bracket Rear LH	1	1	1
4	SMW-0120 LH	Crafter/MAN TGE Cab Shelf Bracket Side LH	1	1	1
5	SMW-0120 RH	Crafter/MAN TGE Cab Shelf Bracket Side RH	1	1	1
6	SMW-0121	Crafter/MAN TGE Cab Shelf Bracket Rear RH	1	1	1
7	M-0012	Crafter/MAN TGE Cab Headliner Spacer	2	2	2
8	CSK Screw	4 x 25mm	5	5	15
9	CSK Screw	No.6 x 1/2"	4	4	4
10	Button Head Bolt	M6 x 12mm	4	4	4
11	Button Head Bolt	M6 x 50mm	2	2	2
12	Flanged Button Head Bolt	M6 x 25mm	2	2	2
13	Washer	M6	2	2	2
14	Nyloc Nut	M6	2	2	2
15	CRUX-0025 Template	Paper Template	-	-	1

What's in the box?

The various kit options and their parts are noted in the table with a diagram on the following page.

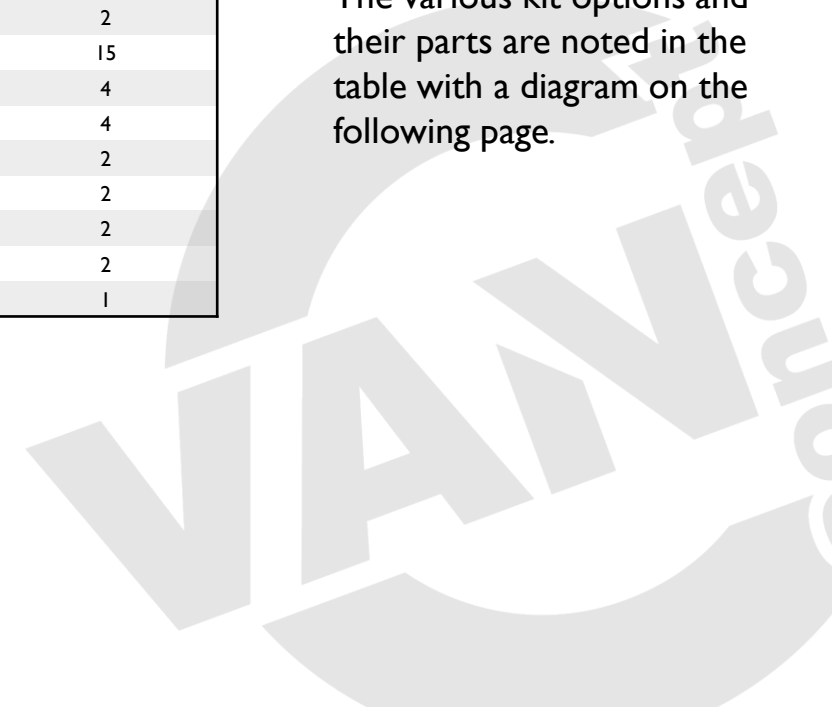

INSTRUCTIONS
CAB HEADLINER SHELF

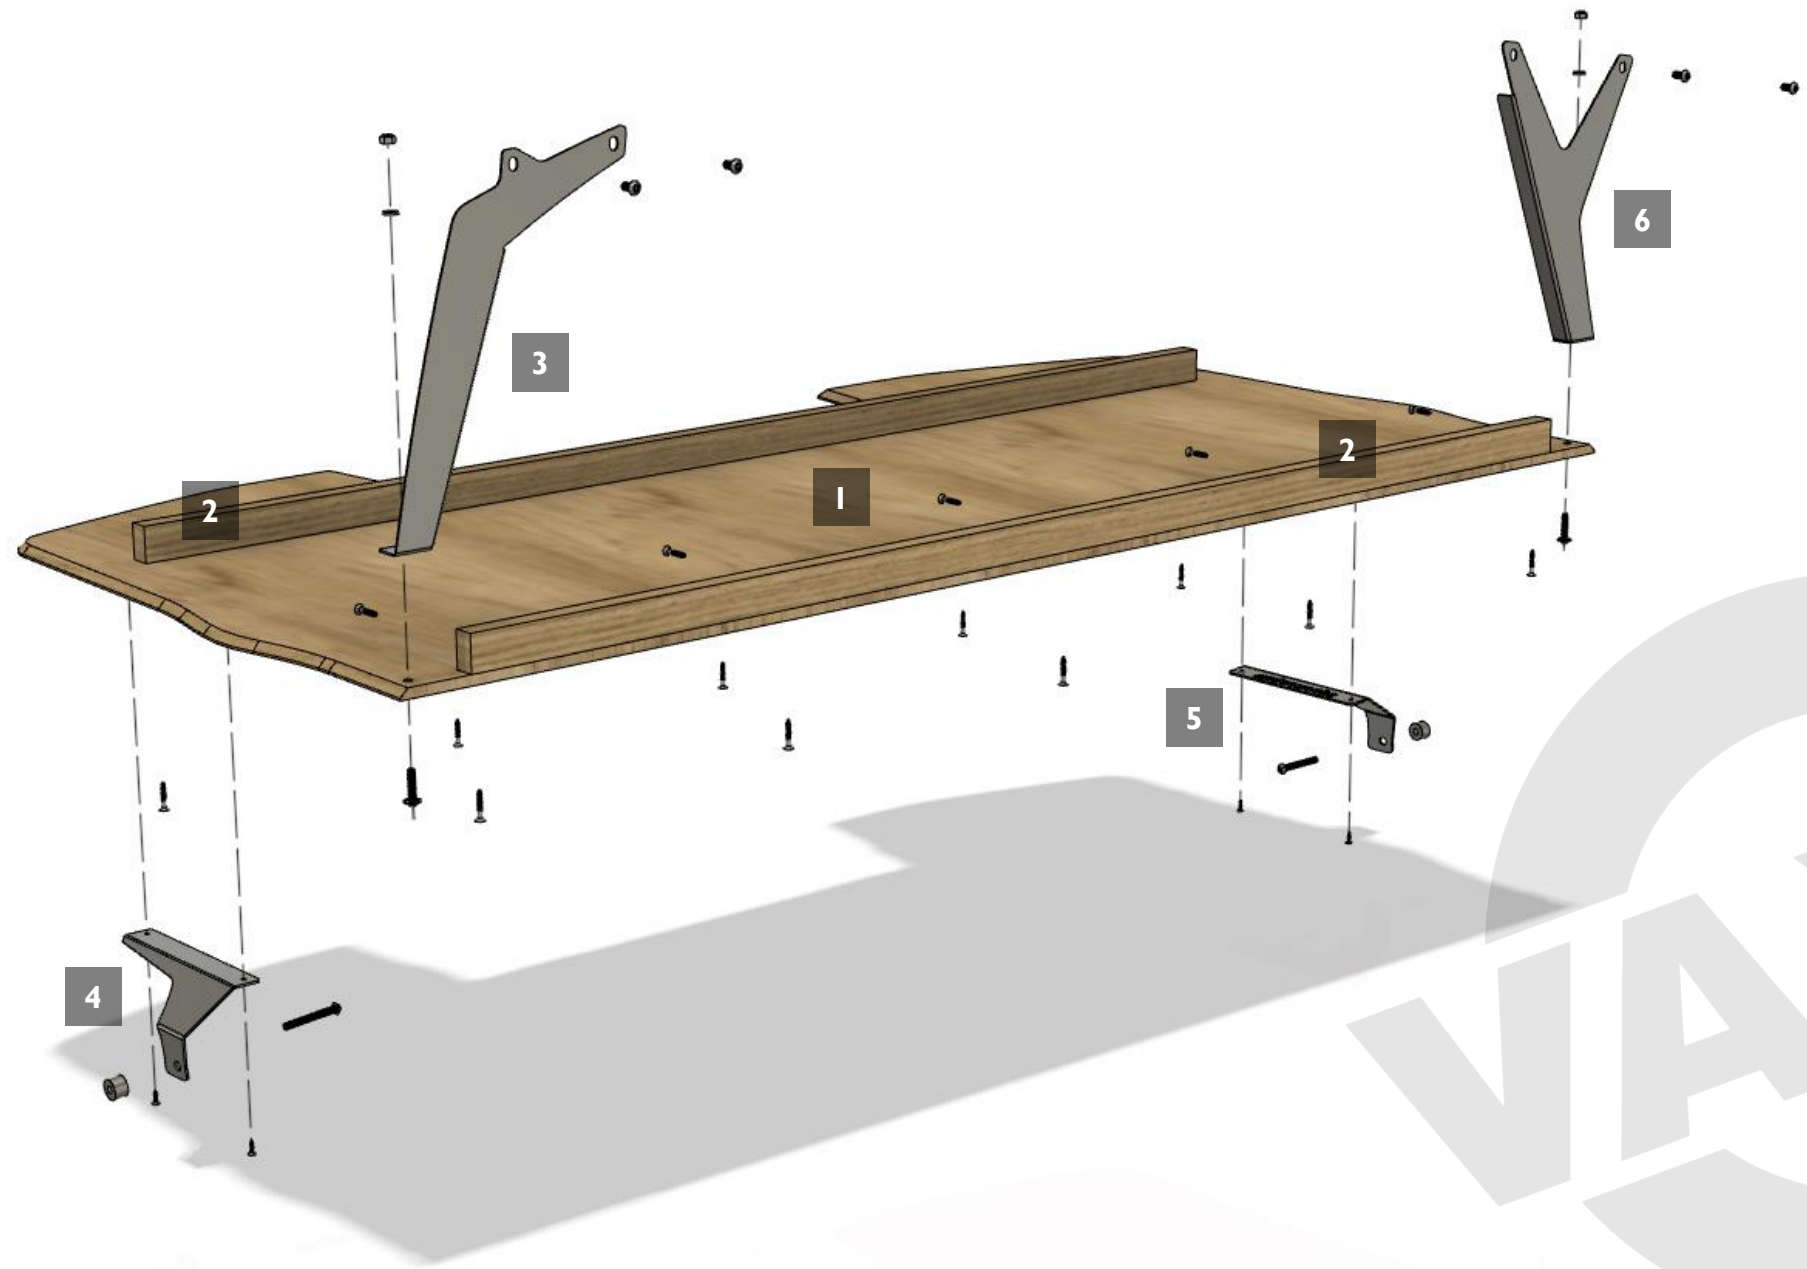

INSTRUCTIONS CAB HEADLINER SHELF




- Use the template supplied to mark around and cut-out the shelf from 9mm plywood. (Note the areas that need a chamfer adding).
- Attach the two strengthening ribs in the positions shown, using the screws supplied. (We advise using some PVA glue as well).

INSTRUCTIONS CAB HEADLINER SHELF




- Line the plywood with your chosen finish.
- Once fully lined, pierce the carpet in the two rear corners where the pre-drilled hole is.

INSTRUCTIONS CAB HEADLINER SHELF

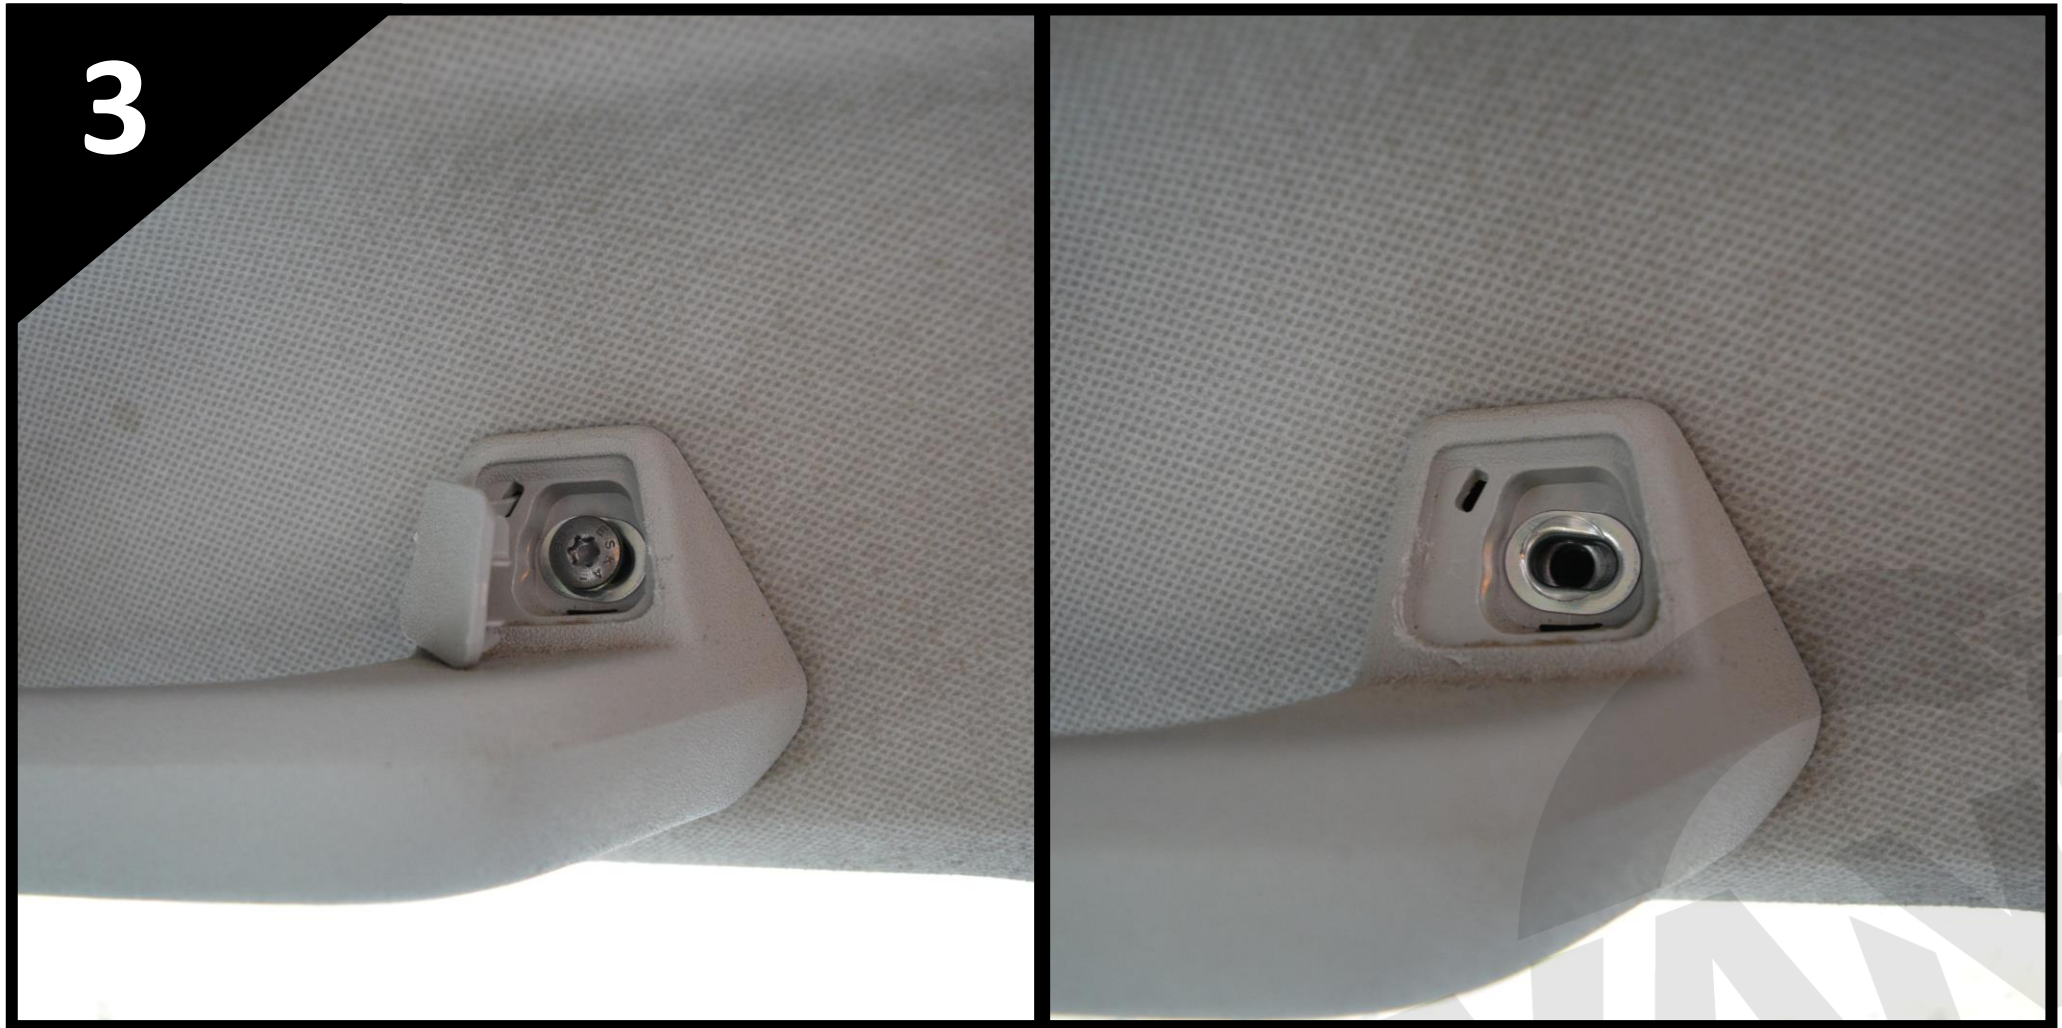

- On the right side grab handle above the door, remove the plastic cover and remove the Torx bolt that secures the grab handle in place.
 - Pull out or cut off the cover plate retaining clip.
 - *Ensure the metal dished cup remains in place.*

INSTRUCTIONS CAB HEADLINER SHELF

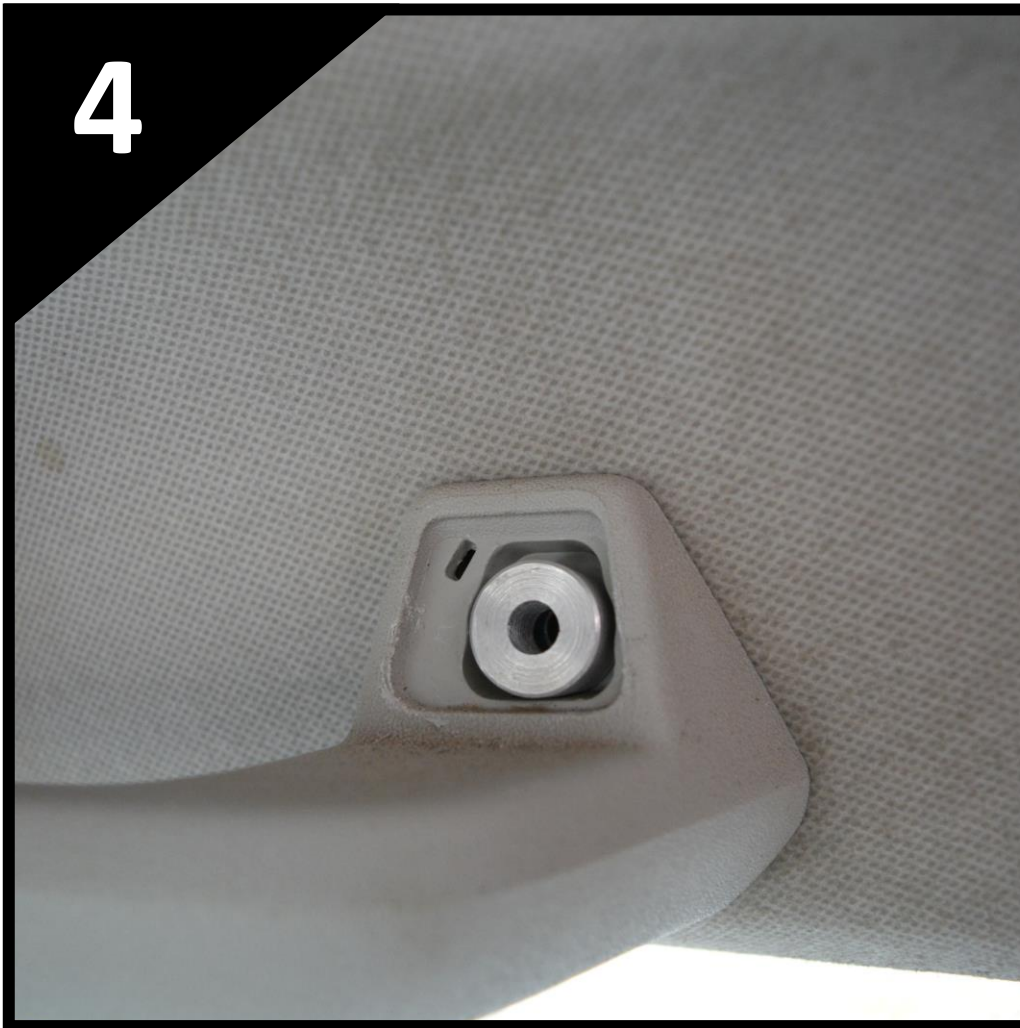


- Fit one of the spacers provided into the recess hole, offer up the right sided front bracket (item #5) and fit 1x M6 x 50mm long button head bolt.
 - *Do not fully tighten at this stage.*

INSTRUCTIONS CAB HEADLINER SHELF



- Repeat the previous two stages to fit the left sided bracket (item #4)

INSTRUCTIONS CAB HEADLINER SHELF

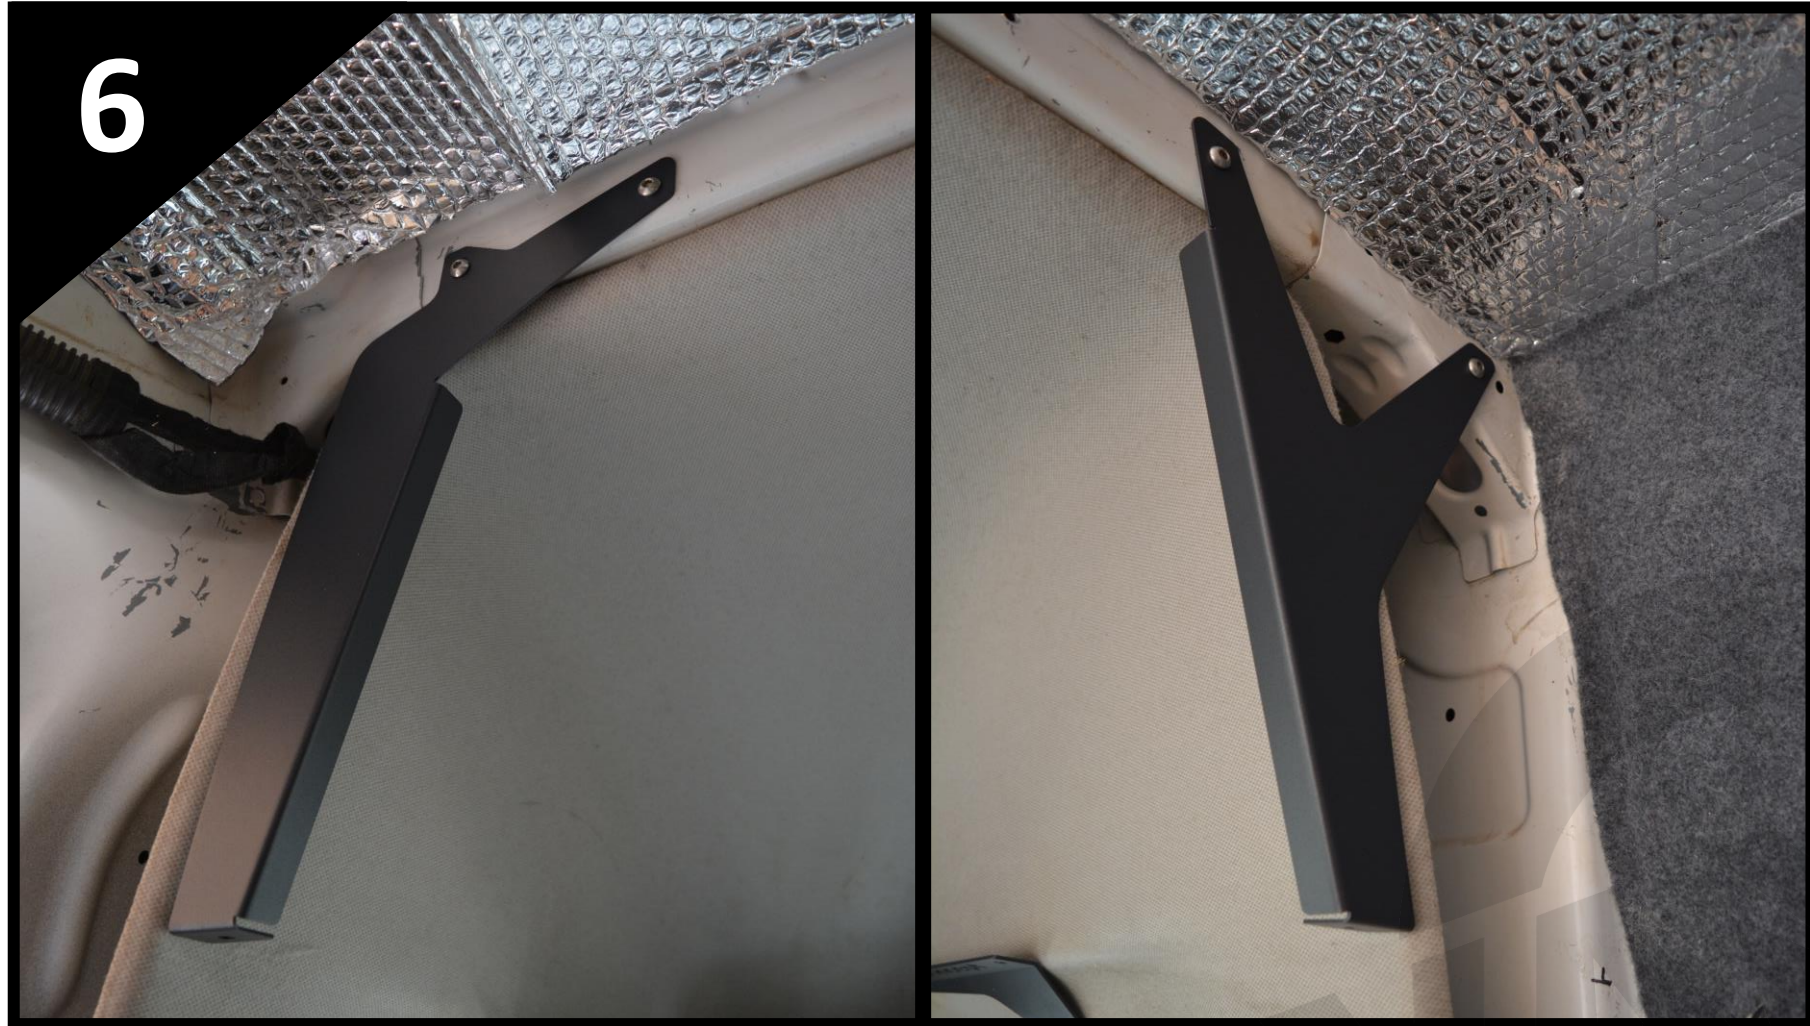

- Take the two rear brackets (item #3 & #6) and fit into the mounting holes in the rear of the roof rib using the 4x M6 x 12mm button head bolts.
- As a guide, if using a shelf made from 9mm plywood, position the mounting bolts at the top of the mounting slots. If a 12mm thick shelf is being used, position the bolts at the bottom of the mounting slots.

INSTRUCTIONS CAB HEADLINER SHELF



- Offer the shelf into place, ensuring it is pushed forward fully.

INSTRUCTIONS CAB HEADLINER SHELF



- Fit the 2x M6 x 25mm flanged button head bolts through the two mounting holes in the rear corners of the shelf and locate through the mounting hole in the rear brackets.
 - Fit 1x washer and 1x M6 Nyloc nut to each bolt and tighten to secure in place.
- On the side brackets, fit the 4x No.6 x 1/2" screws into the four countersunk holes of the brackets and tighten into the shelf. This will position the brackets correctly and now the two M6 x 50mm button head bolts can be fully tightened.

INSTRUCTIONS CAB HEADLINER SHELF



- We advise to fit a surround around the bulkhead and to use the 5x 4 x 25mm screws to secure the rear strengthening rib on the shelf to the surround before use for additional strength.
- *Please note that this shelf is designed to take lightweight items only. Do not store anything with significant weight, especially whilst the vehicle is in motion.*