

INSTRUCTIONS

DOOR PILLAR BLANKING PLATE KIT

CRUX-0052 DOOR PILLAR BLANKING PLATES – VW CRAFTER '17 ONWARDS / MAN TGE '17 ONWARDS


No.	Part No.	Description	Quantity
1	3DP-0001	3DP-0001	1
2	3DP-0002	3DP-0002	2
3	3DP-0003	3DP-0003	2
4	3DP-0004	3DP-0004	6
5	3DP-0005	3DP-0005	2
6	3DP-0006	3DP-0006	1

**You will also need 6x screws to temporarily hold the blanking plates
and a small amount of adhesive, e.g. CTI**


What's in the box?

The various kit options and their parts are noted in the table with a diagram on the following page.

INSTRUCTIONS DOOR PILLAR BLANKING PLATE KIT

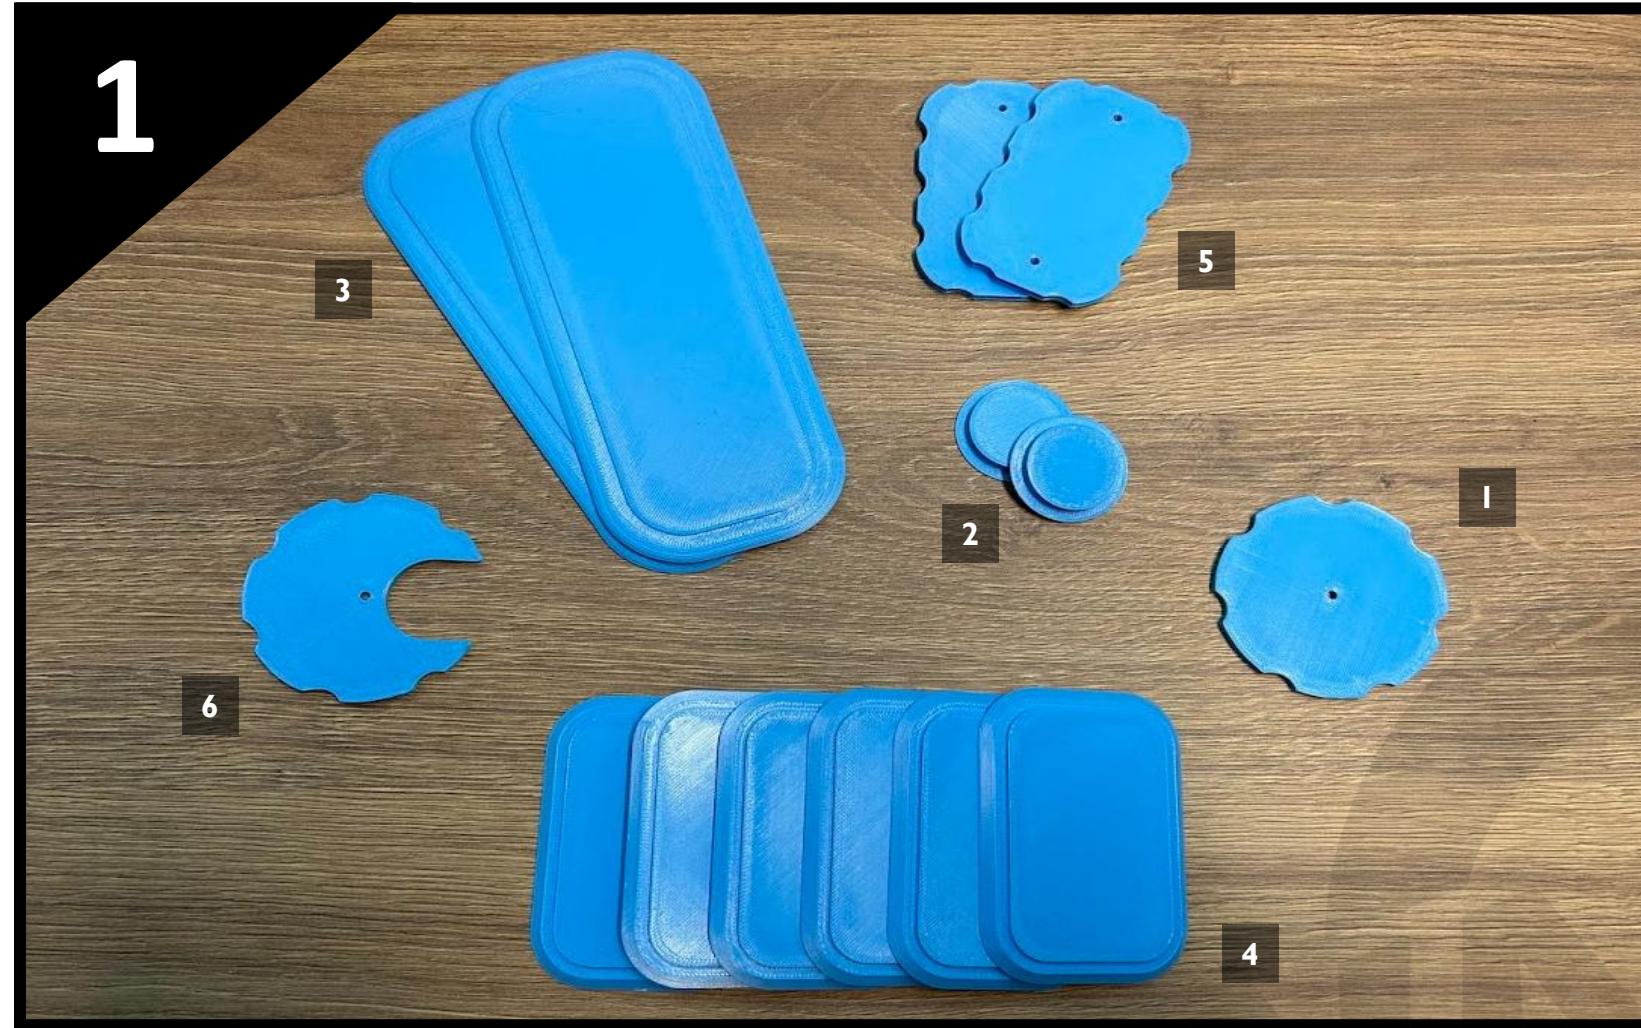


INSTRUCTIONS DOOR PILLAR BLANKING PLATE KIT

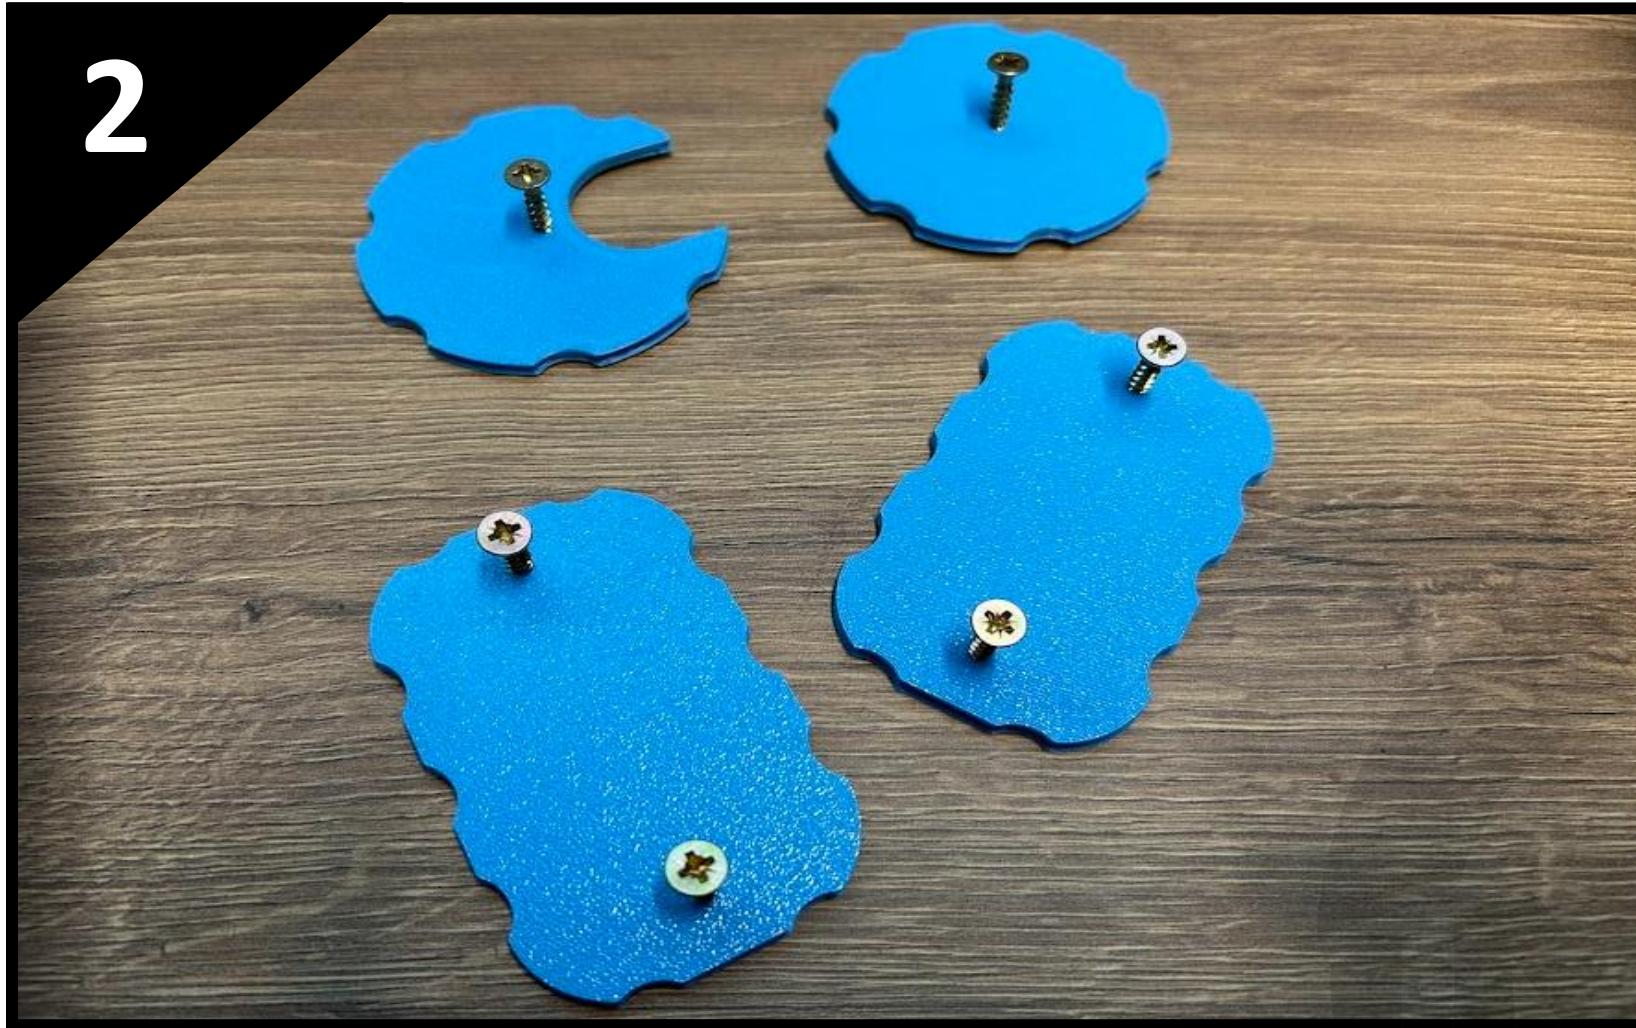


- Temporarily fit some screws into the holes on the blanking plates with wavy edges. These are used to hold the blanking plates whilst applying adhesive and setting in place. (Remove once the adhesive is set).

INSTRUCTIONS DOOR PILLAR BLANKING PLATE KIT

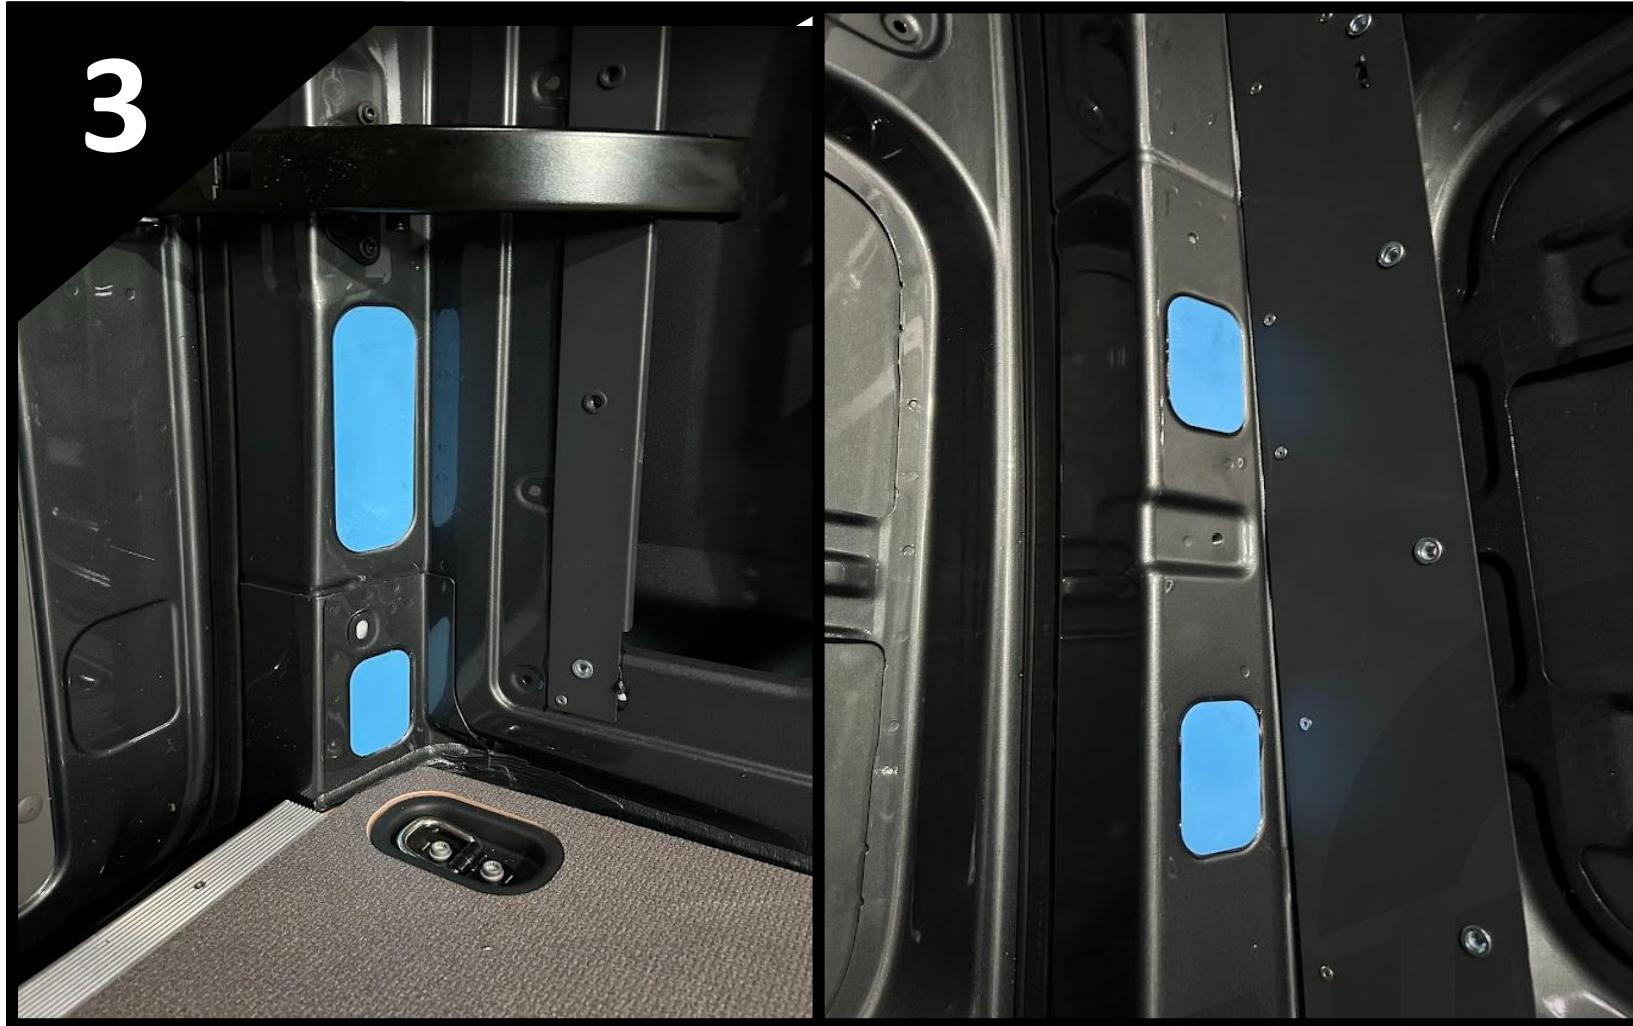

- Apply a small amount of adhesive around the depression in the van body and position the blanking plates in the recess.

INSTRUCTIONS DOOR PILLAR BLANKING PLATE KIT

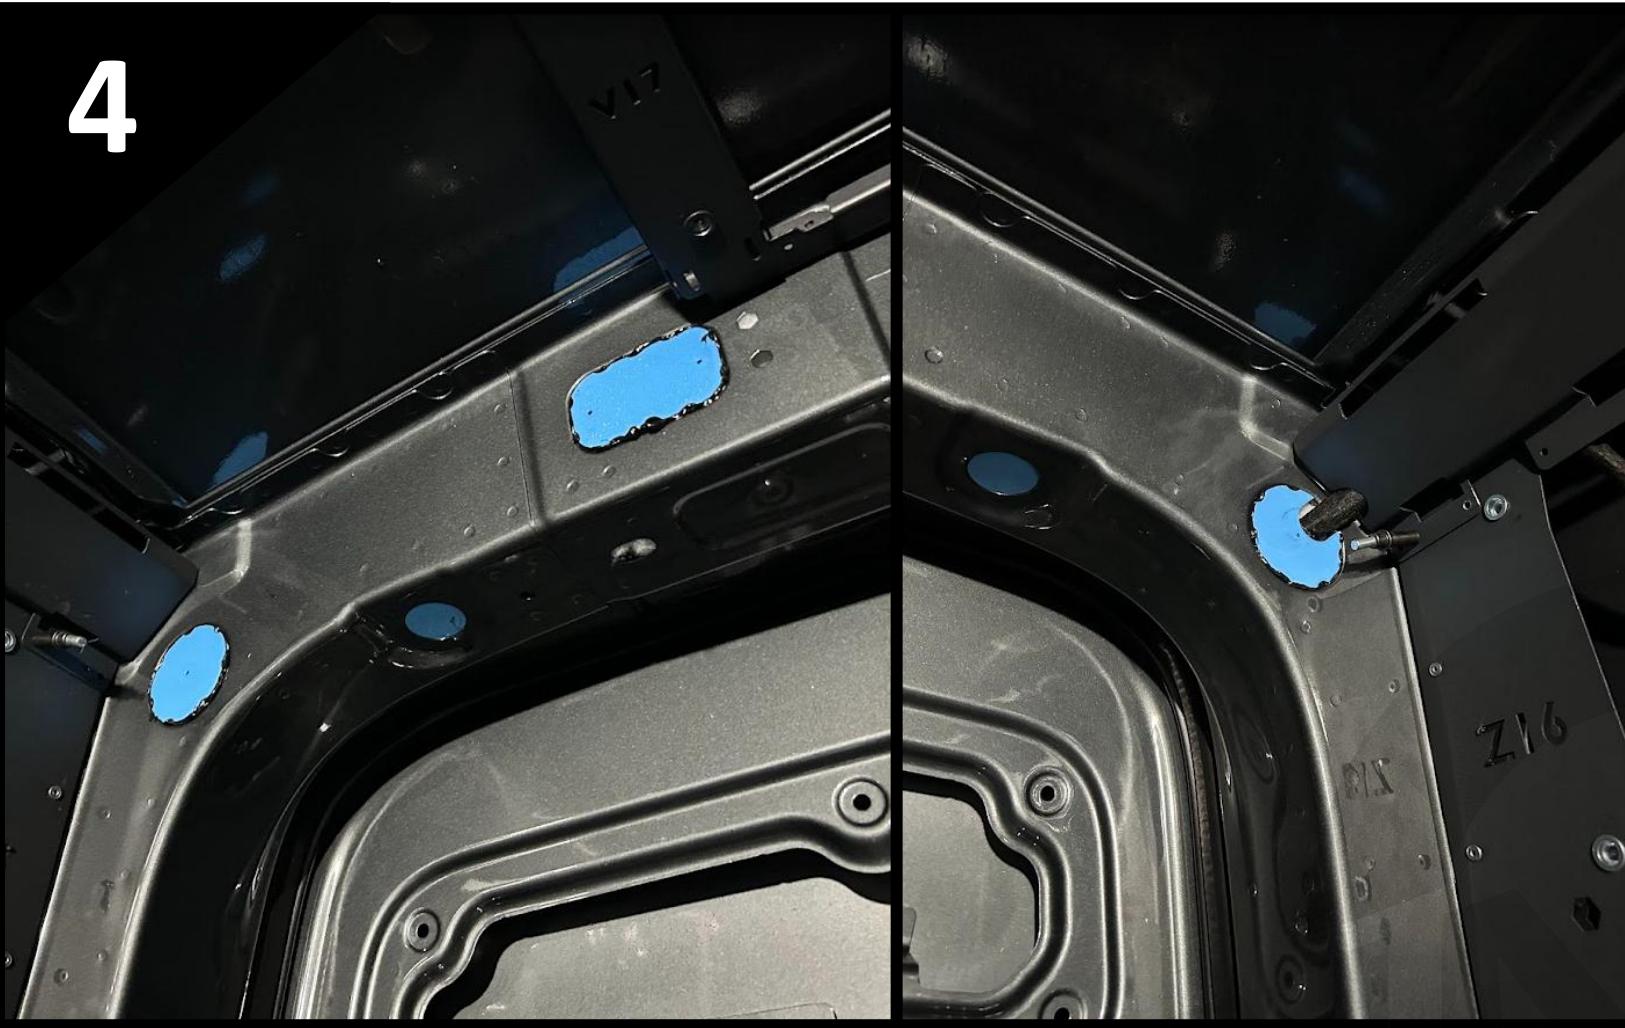

- Whilst holding the pre-fitted screws, apply some adhesive around the perimeter of the blanking plates with the wavy edges. Set these into the holes and sit flush within the hole.

INSTRUCTIONS DOOR PILLAR BLANKING PLATE KIT



- Once the adhesive is fully cured, remove the screws and trim off any excess adhesive with a sharp knife. The door pillar is now prepared and ready for carpet lining.

